


INSTALLATION

1. INSTALL NO.1 COOLING FAN

- (a) Install the cooling fan.
 - (1) Attach the lower side of the cooling fan to the brackets of the radiator.
 - (2) Install the cooling fan with the 2 bolts.

Torque: 7.0 N·m (70 kgf·cm, 62 in.-lbf)
- (b) Connect the cooling fan connector.
- (c) Install the radiator reservoir.
 - (1) Attach the lower side of the reservoir to the bracket of the cooling fan.
 - (2) Install the reservoir with the bolt.
 - (3) Connect the reservoir hose to the radiator.
- (d) Connect the radiator upper hose to the the radiator.
- (e) Install the air cleaner inlet.
 - (1) Connect the air cleaner inlet to the air cleaner case.
 - (2) Install the air cleaner inlet with the bolt.
- (f) Fill with the engine coolant. (See page [CO-2](#))

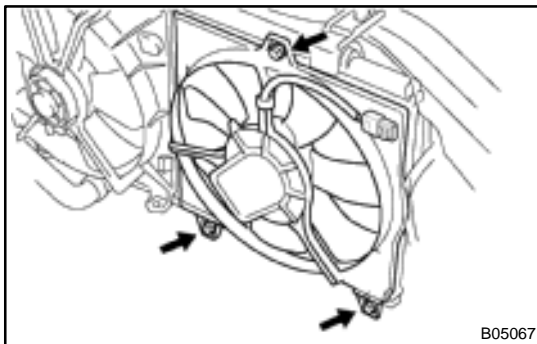

2. INSTALL NO.2 COOLING FAN

- (a) Install the cooling fan with the 3 bolts.

Torque: 7.0 N·m (70 kgf·cm, 62 in.-lbf)
 - (b) Connect the cooling fan connector.
3. INSTALL AIR CLEANER INLET
 4. INSTALL ENGINE UNDER COVER