


## REMOVAL

### 1. REMOVE ENGINE UNDER COVERS

### 2. REMOVE AIR CLEANER INLET

### 3. REMOVE NO.1 COOLING FAN

- (a) Drain the engine coolant.
- (b) Remove the bolt and air cleaner inlet.
- (c) Disconnect the radiator upper hose from the radiator.
- (d) Remove the radiator reservoir.
  - (1) Disconnect the reservoir hose from the radiator.
  - (2) Remove the bolt and reservoir.
- (e) Disconnect the cooling fan connector.
- (f) Remove the 2 bolts and cooling fan.

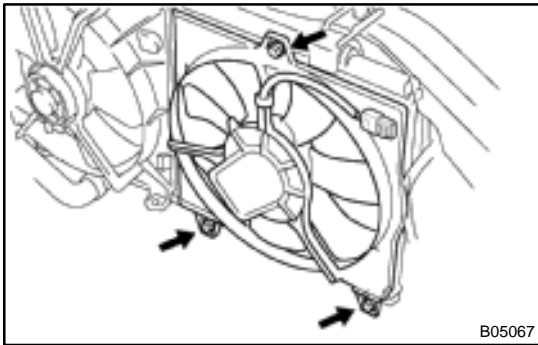

### 4. REMOVE NO.2 COOLING FAN

- (a) Disconnect the cooling fan connector.
- (b) Remove the 3 bolts and cooling fan.