


ENGINE COOLANT TEMPERATURE (ECT) SWITCH INSPECTION

COOHM-01

1. DRAIN ENGINE COOLANT
2. REMOVE ECT SWITCH

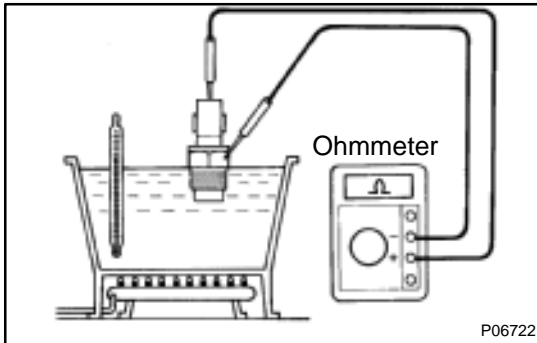

3. INSPECT ECT SWITCH

- (a) Using an ohmmeter, check that there is no continuity between the terminals when the coolant temperature is above 94°C (201°F).

If there is continuity, replace the switch.

- (b) Using an ohmmeter, check that there is continuity between the terminals when the coolant temperature is below 83°C (181°F).

If there is no continuity, replace the switch.

4. REINSTALL ECT SWITCH

5. REFILL WITH ENGINE COOLANT (See page [CO-2](#))
6. START ENGINE AND CHECK FOR COOLANT LEAKS