


ENGINE MAIN RELAY INSPECTION

COOHN-02

1. REMOVE RELAY BOX COVER
2. REMOVE ENGINE MAIN RELAY

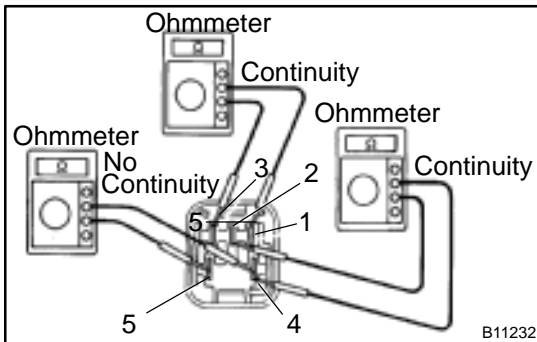

3. INSPECT ENGINE MAIN RELAY

(a) Inspect the relay continuity

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.


If there is no continuity, replace the relay.

- (2) Check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

- (3) Check that there is no continuity between terminals 4 and 5.

If there is continuity, replace the relay.

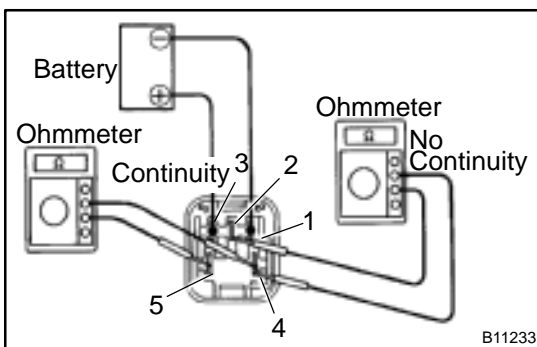

(b) Inspect the relay operation

- (1) Apply battery positive voltage across terminals 1 and 3.

- (2) Using an ohmmeter, check that there is no continuity between terminals 4 and 5.

If there is continuity, replace the relay.

- (3) Check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

4. REINSTALL ENGINE MAIN RELAY

5. REINSTALL RELAY BOX COVER