

## INSTALLATION

1. **w/ A/C:**  
**INSTALL NO.2 COOLING FAN TO RADIATOR**  
(See page [CO-28](#))
2. **INSTALL RADIATOR AND NO.2 COOLING FAN (w/ A/C) ASSEMBLY**
  - (a) Install the 2 lower radiator supports to the radiator.
  - (b) Attach the 2 lower radiator supports on the radiator to the body brackets.
  - (c) Install the radiator and cooling fan assembly with the 2 upper radiator supports and 2 bolts.  
**Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)**
  - (d) Connect the No.2 cooling fan connector.
  - (e) Connect these hoses to the radiator:
    - Radiator lower hose
    - 2 A/T oil cooler hoses
3. **INSTALL NO.1 COOLING FAN (See page [CO-28](#))**
4. **CONNECT RADIATOR UPPER HOSE TO RADIATOR**
5. **INSTALL RADIATOR RESERVOIR**
  - (a) Attach the lower side of the reservoir to the bracket of the cooling fan.
  - (b) Install the reservoir with the bolt.
  - (c) Connect the reservoir hose to the radiator.
6. **INSTALL AIR CLEANER INLET**
  - (a) Connect the air cleaner inlet to the air cleaner case.
  - (b) Install the air cleaner inlet with the bolt.
7. **FILL WITH ENGINE COOLANT (See page [CO-2](#))**
8. **START ENGINE AND CHECK FOR ENGINE COOLANT AND A/T FLUID LEAKS**
9. **INSTALL ENGINE UNDER COVERS**

