


REMOVAL

1. **REMOVE ENGINE UNDER COVERS**
2. **DRAIN ENGINE COOLANT**
3. **REMOVE AIR CLEANER INLET**
4. **REMOVE RADIATOR RESERVOIR**
 - (a) Disconnect the reservoir hose from the radiator.
 - (b) Remove the bolt and reservoir.
5. **DISCONNECT RADIATOR UPPER HOSE FROM RADIATOR**
6. **REMOVE NO.1 COOLING FAN (See page [CO-25](#))**
7. **REMOVE RADIATOR AND NO.2 COOLING FAN (w/ A/C) ASSEMBLY**
 - (a) Disconnect the radiator lower hose.
 - (b) A/T:
Disconnect the 2 A/T oil cooler hoses.
 - (c) Disconnect the No.2 cooling fan connector.

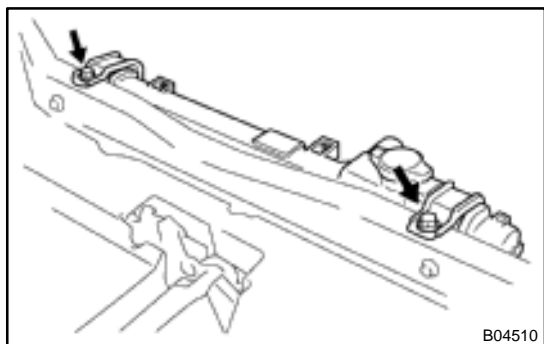

- (d) Remove the 2 bolts and 2 upper radiator supports.
- (e) Lift out the radiator and No.2 cooling fan assembly.
- (f) Remove the 2 lower radiator supports from the radiator.

8. **w/ A/C:**

REMOVE NO.2 COOLING FAN FROM RADIATOR

Remove the 3 bolts and cooling fan.