



## INSTALLATION

### 1. PLACE THERMOSTAT IN WATER INLET

- (a) Install a new gasket to the thermostat.
- (b) Align the thermostat jiggle valve with the protrusion of the water inlet, and insert the thermostat in the water inlet.

### 2. INSTALL WATER INLET

Install the water inlet with the 2 nuts.

**Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)**

### 3. INSTALL AIR CLEANER INLET

### 4. FILL WITH ENGINE COOLANT (See page [CO-2](#))

### 5. START ENGINE AND CHECK FOR LEAKS