

## REMOVAL

### NOTICE:

**Do not remove the thermostat unless absolutely necessary.**

### HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency.

- 1. REMOVE AIR CLEANER INLET**
- 2. DRAIN ENGINE COOLANT**
- 3. REMOVE WATER INLET AND THERMOSTAT**
  - (a) Remove the 2 nuts, water inlet and thermostat from the water inlet housing.
  - (b) Remove the gasket from the thermostat.