


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminals Tc and E1 of the DLC1 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

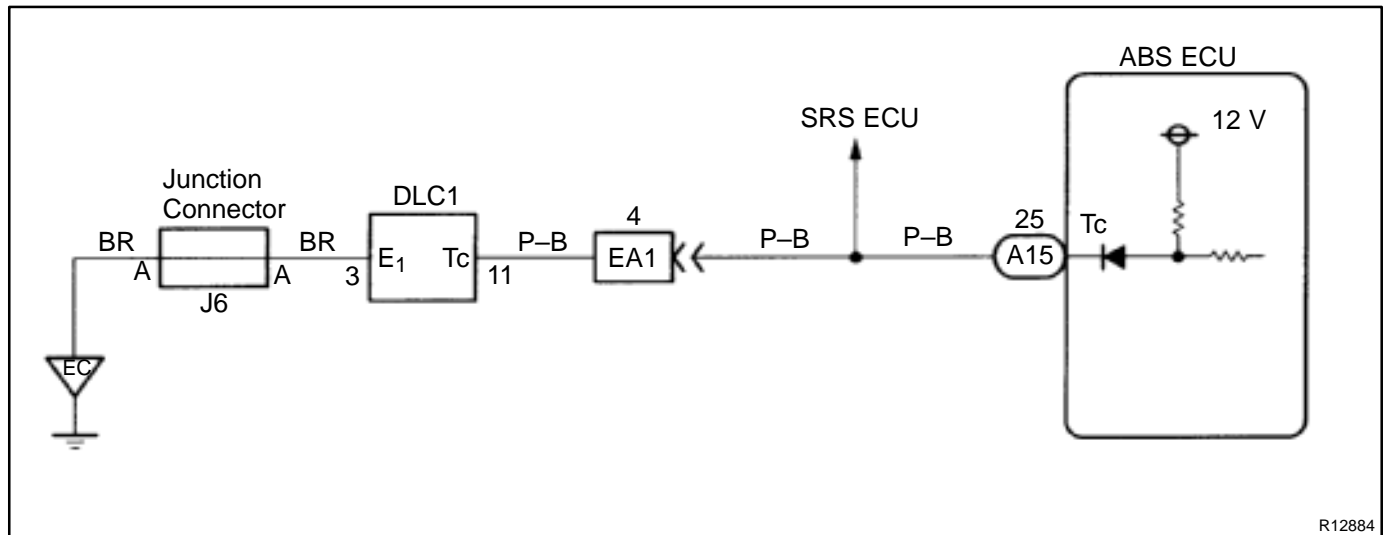

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of DLC1.

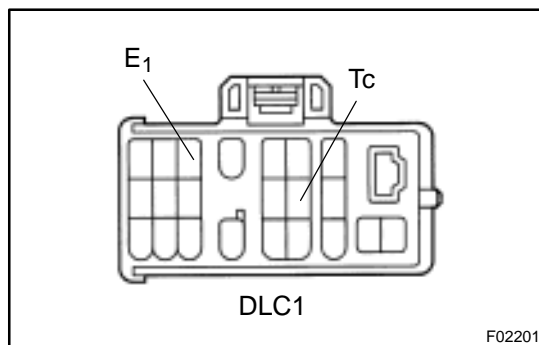

CHECK:

- Turn ignition switch ON.
- Measure voltage between terminals Tc and E₁ of the DLC1.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ are connected, the ECU may be defective.

NG

2	Check for open and short in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page IN-27).
---	---

