


## Ts Terminal Circuit

### CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.

Connecting terminals Ts and E<sub>1</sub> of the DLC1 in the engine compartment starts the check.


### WIRING DIAGRAM

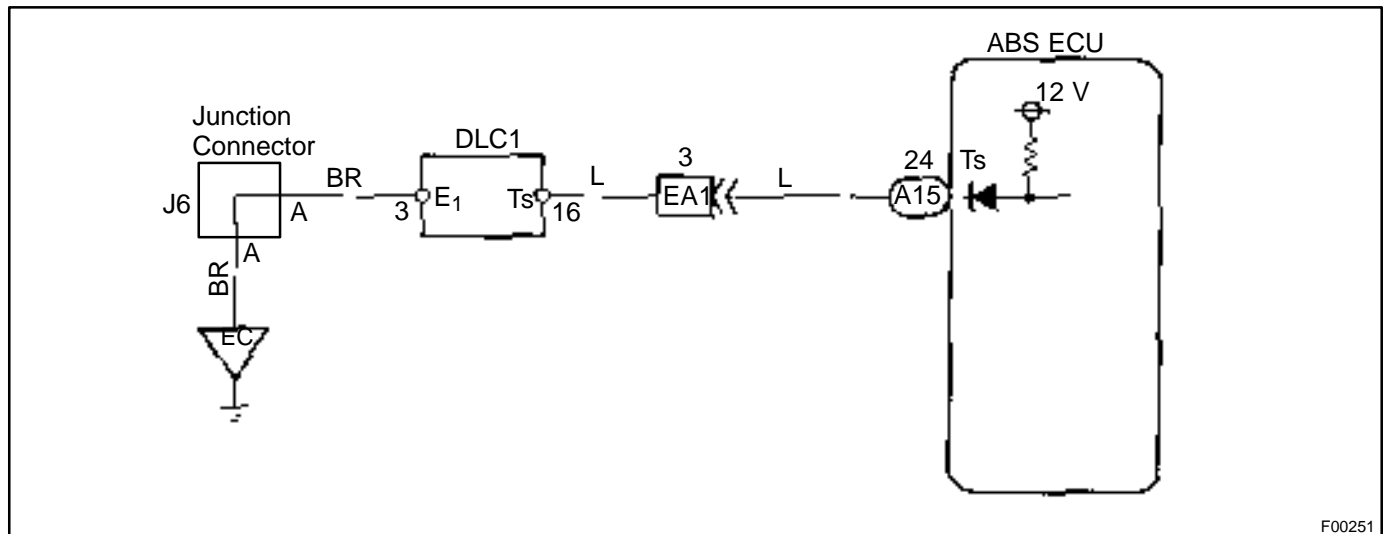

F00251

### INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E<sub>1</sub> of DLC1.

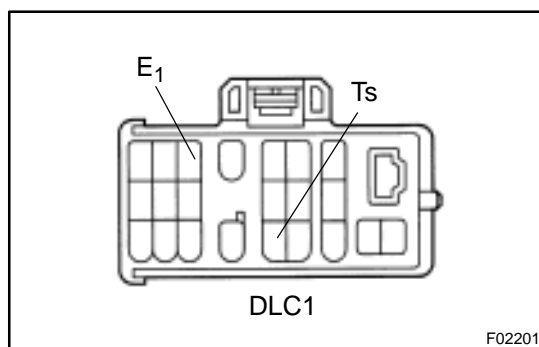

F02201

#### CHECK:

- Turn ignition switch ON.
- Measure voltage between terminals Ts and E1 of the DLC1.

#### OK:

**Voltage: 10 – 14 V**

**OK**

If ABS warning light does not blink even after Ts and E1 are connected, the ECU may be defective.

**NG**

2	Check for open and short in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page <a href="#">IN-27</a> ).
---	---

