

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant page for troubleshooting.

NOTICE:

When removing the ECU, turn the IG switch OFF.

Symptoms	Inspection Circuit	See page
ABS does not operate.	Only when 1. – 4. are all normal and the problem is still occurring, replace the ABS ECU. 1. Check the DTC reconfirming that the normal code is output. 2. IG power source circuit. 3. Speed sensor circuit. 4. Check the ABS actuator with a checker. If abnormal, check the hydraulic circuit for leakage (See page Leakage).	DI-173 DI-194 DI-188 BR-36
ABS does not operate efficiently.	Only when 1. – 4. are all normal and the problem is still occurring, replace the ABS ECU. 1. Check the DTC reconfirming that the normal code is output. 2. Speed sensor circuit. 3. Stop light switch circuit. 4. Check the ABS actuator with a checker. If abnormal, check the hydraulic circuit for leakage (See page Leakage).	DI-173 DI-188 DI-199 BR-36
ABS warning light abnormal.	1. ABS warning light circuit. 2. ABS ECU.	DI-201
DTC check cannot be done.	Only when 1. and 2. are all normal and the problem is still occurring, replace the ABS ECU. 1. ABS warning light circuit. 2. Tc terminal circuit.	DI-201 DI-204
Speed sensor signal check cannot be done.	1. Ts terminal circuit. 2. ABS ECU.	DI-206