


Diagnosis Circuit

CIRCUIT DESCRIPTION


This circuit sends a signal to the ECU that DTC output is required.

WIRING DIAGRAM

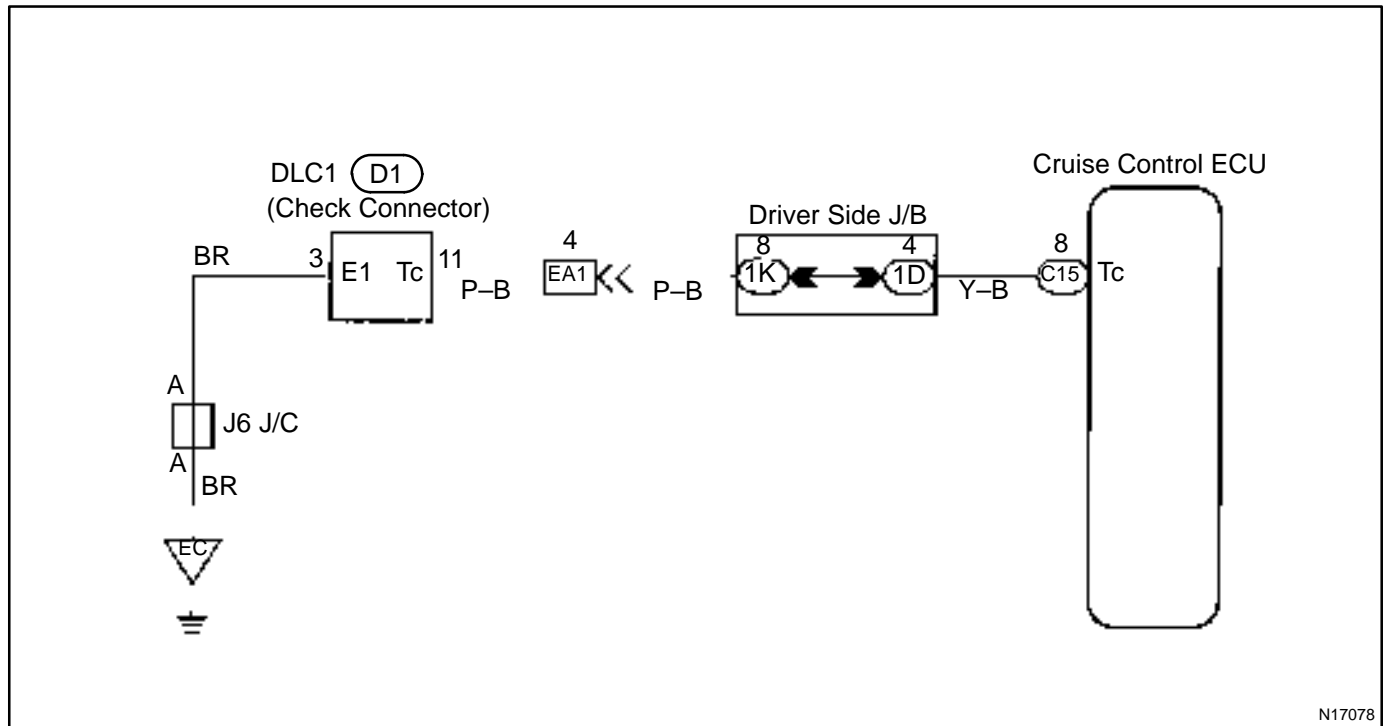

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and E ₁ of DLC1. |
|---|--|

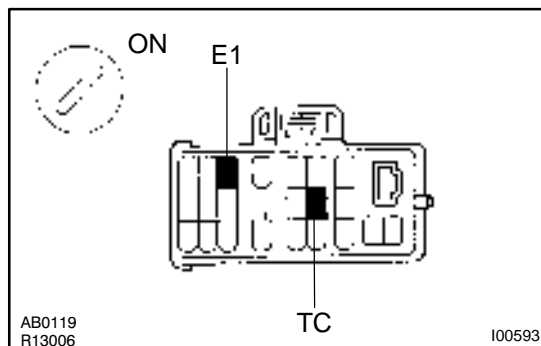

PREPARATION:

- Turn ignition switch ON.
- Measure voltage between terminals Tc and E₁ of DLC1.

CHECK:

OK:

Voltage: 10 – 14 V

NG

Proceed to next circuit inspection shown on matrix chart (See page [DI-308](#)).

OK

2	Check for open and short in harness and connector between ECU and DLC1, DLC1 and body ground (See page IN-27).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace ECU (See page [IN-27](#)).