


CIRCUIT DESCRIPTION


When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

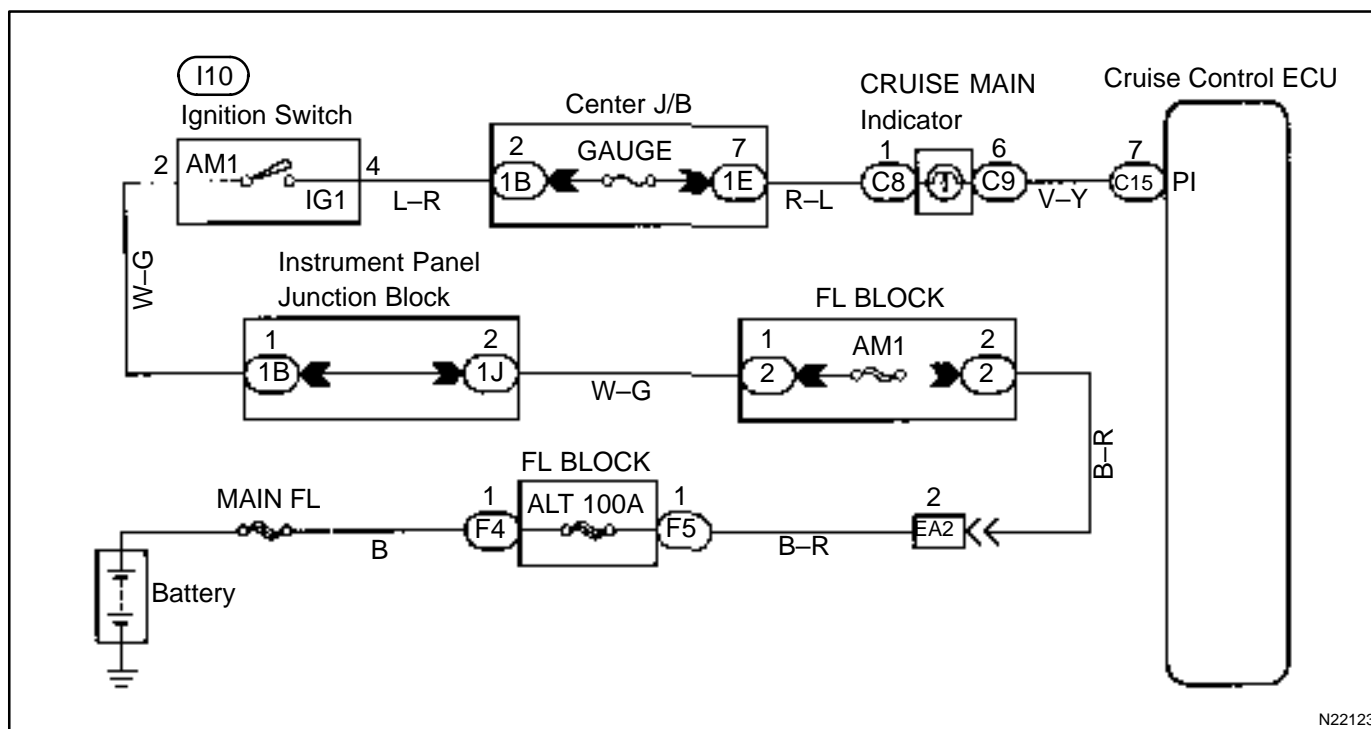

INSPECTION PROCEDURE

- 1** Check voltage between terminals PI and GND of cruise control ECU connector.

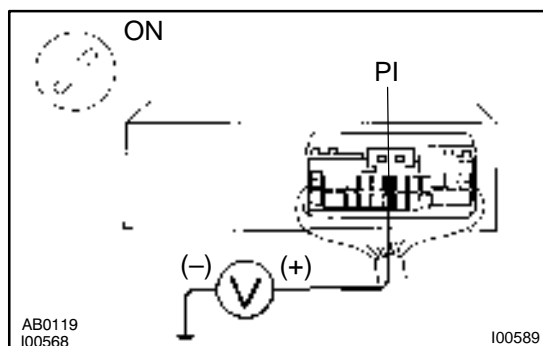

Ignition switch ON.

Measure voltage between terminals PI and GND of cruise control ECU connector when main switch on and off.

| | |
|-----------------|-------------|
| Switch position | Voltage |
| OFF | 10 – 16 V |
| ON | Below 1.2 V |

Proceed to next circuit inspection shown on matrix chart (See page [DI-308](#)).

NG

| | |
|---|---|
| 2 | Check combination meter. (See page BE-2) |
|---|---|

NG**Replace combination meter.****OK**

**Check and replace cruise control ECU
(See page [IN-27](#)).**