

DTC	P1335	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to "Crankshaft Position Sensor "A" Circuit Malfunction " on page [DI-62](#).

DTC No. (See Page)	Detection Item	Trouble Area
P1335	No crankshaft position sensor signal to ECM with engine speed 1,000 rpm or more	<ul style="list-style-type: none">• Open or short in crankshaft position sensor circuit• Crankshaft position sensor• ECM

See DTC P0335 on page Wiring Diagram and Inspection Procedure.