

ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI4NH-01

Troubleshoot in accordance with the procedure on the following page.

