

## PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Does not start (Engine does not crank)	1. Starter 2. Starter relay	ST-14 ST-30 ST-33
Does not start (No combustion)	1. ECM power source circuit 2. Fuel pump control circuit	DI-112 DI-115
Does not start (No complete combustion)	1. Fuel pump control circuit	DI-115
Difficult to start (Engine cranks normally)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-109 DI-115 EM-3
Difficult to start (Cold engine)	1. Starter signal circuit 2. Fuel pump control circuit	DI-109 DI-115
Difficult to start (Hot engine)	1. Starter signal circuit 2. Fuel pump control circuit	DI-109 DI-115
Poor idling (High engine idle speed)	1. A/C switch circuit 2. ECM power source circuit	AC-3 DI-112
Poor idling (Low engine idle speed)	1. A/C switch circuit 2. Fuel pump control circuit	AC-3 DI-115
Poor idling (Rough idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-115
Poor idling (Hunting)	1. ECM power source circuit 2. Fuel pump control circuit	DI-112 DI-115
Poor driveability (Hesitation/Poor acceleration)	1. Fuel pump control circuit 2. A/T faulty 3. A/C cut control circuit	DI-115 DI-140 DI-121
Poor driveability (Surging)	1. Fuel pump control circuit	DI-115
Engine stall (Soon after starting)	1. Fuel pump control circuit	DI-115
Engine stall (During A/C operation)	1. A/C signal circuit 2. Engine control module (ECM)	AC-69 IN-27