

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit.).

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
Normal (DI-252)	• System normal	–	OFF
	• Source voltage drop	• Battery • Airbag sensor assembly	ON
11 (DI-220)	• Short in squib circuit (to ground)	• Steering wheel pad (D squib) • Front passenger airbag assembly (P squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
12 (DI-227)	• Short in squib circuit (to B+)	• Steering wheel pad (D squib) • Front passenger airbag assembly (P squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
13 (DI-234)	• Short in D squib circuit	• Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
14 (DI-239)	• Open in D squib circuit	• Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
31 (DI-243)	• Airbag sensor assembly malfunction	• Airbag sensor assembly	ON
53 (DI-245)	• Short in P squib circuit	• Front passenger airbag assembly (P squib) • Airbag sensor assembly • Wire harness	ON
54 (DI-249)	• Open in P squib circuit	• Front passenger airbag assembly (P squib) • Airbag sensor assembly • Wire harness	ON

HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a source voltage drops.
This malfunction is not stored in memory by the airbag sensor assembly and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the airbag sensor assembly is faulty.