

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none">• With the ignition switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.• SRS warning light is always lit up even when ignition switch is in the LOCK position.	<ul style="list-style-type: none">• SRS warning light system malfunction (Always lit up when ignition switch is in LOCK position.)	DI-255
<ul style="list-style-type: none">• With the ignition switch at ACC or ON, the SRS warning light does not light up.	<ul style="list-style-type: none">• SRS warning light system malfunction (Does not light up, when ignition switch is turned to ACC or ON.)	DI-257
<ul style="list-style-type: none">• DTC not displayed.• SRS warning light is always lit up a DTC check procedure.• DTC displayed without Tc and E1 terminal connection.	<ul style="list-style-type: none">• Tc terminal circuit	DI-260