


CIRCUIT INSPECTION

Indicator Light Circuit

CIRCUIT DESCRIPTION


When the theft deterrent system is preparing to set, this circuit lights up the indicator light. When the system has been set, it continually turns the indicator light on for 1 second and turns it off for 1 second, thus blinking the indicator light.

WIRING DIAGRAM

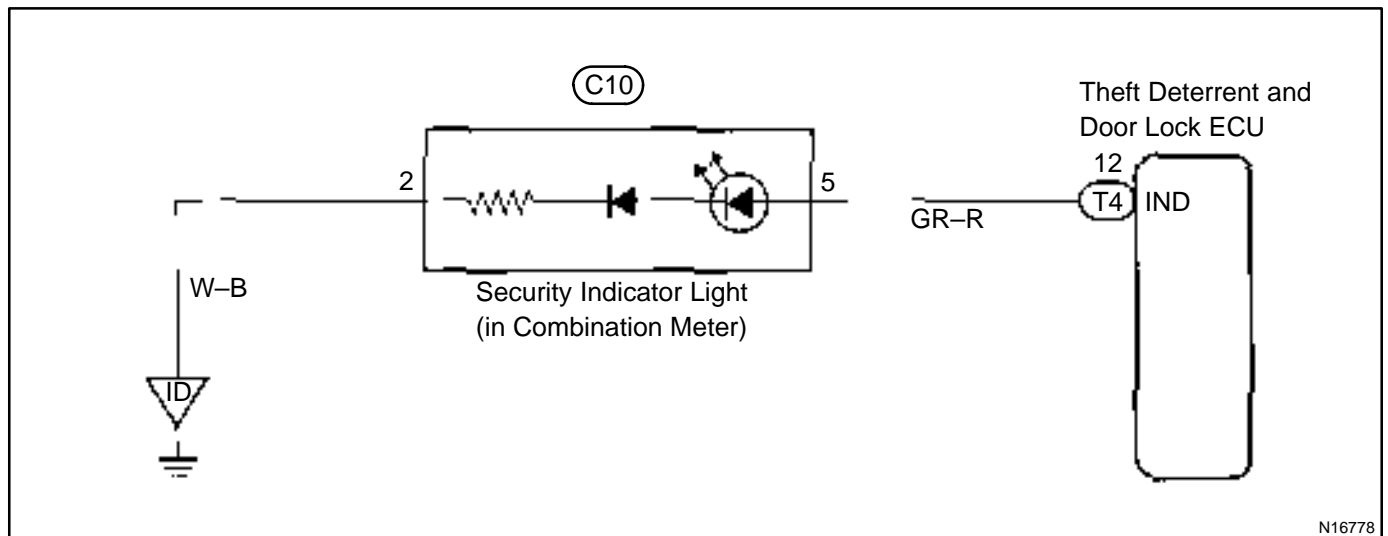

INSPECTION PROCEDURE

- | | |
|---|------------------------|
| 1 | Check indicator light. |
|---|------------------------|

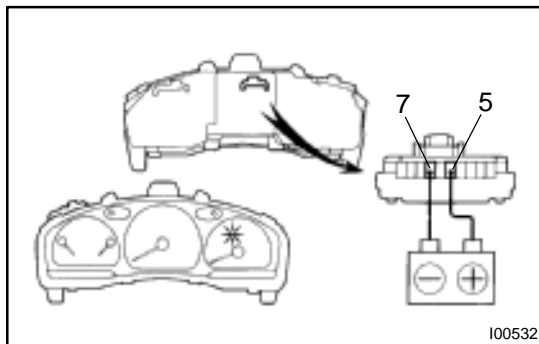

PREPARATION:

- Remove the combination meter.
- Disconnect the connector "C".

CHECK:

Connect positive \oplus lead to terminal 5 and negative \ominus lead to terminal 7 of indicator light connector.

OK:

Indicator light comes on.

NG

Replace tachometer.

OK

| | |
|---|---|
| 2 | Check harness and connector between theft deterrent ECU and indicator light, indicator light and body ground (See page IN-27). |
|---|---|

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU.*1

*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown on matrix chart (See page [DI-273](#)).