


Luggage compartment Door Courtesy Switch Circuit

CIRCUIT DESCRIPTION

The luggage compartment door courtesy switch goes on when luggage compartment door is opened and goes off when the luggage compartment door is closed.

WIRING DIAGRAM

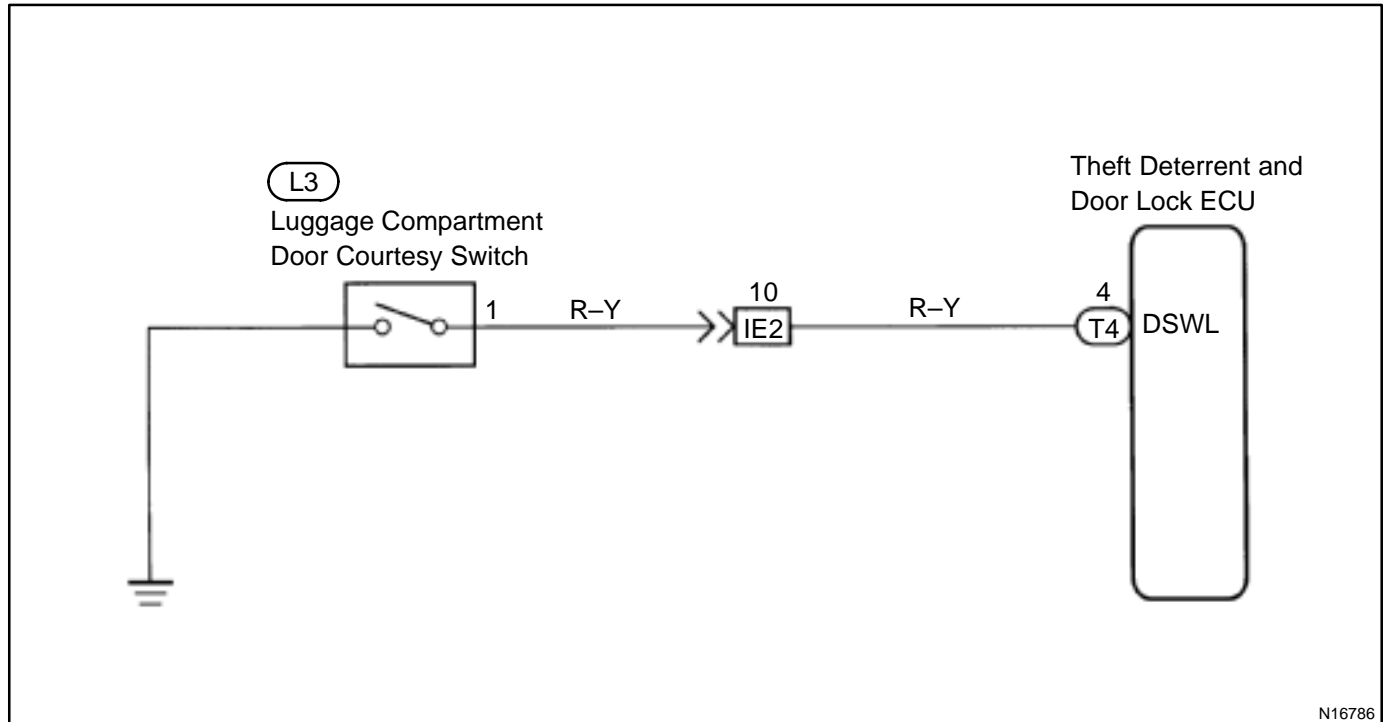

INSPECTION PROCEDURE

1	Check operation of luggage compartment door courtesy light.
---	-------------------------------------------------------------

CHECK:

Check that luggage compartment door courtesy light goes off when luggage compartment door courtesy switch is pushed, and comes on when switch is not pushed.

NG

Check and repair luggage compartment door courtesy light circuit (See page [BE-23](#)).

OK

2	Check for open in harness and connector between theft deterrent ECU and luggage compartment door courtesy switch (See page IN-27).
---	-----------------------------------------------------------------------------------------------------------------------------------------------------

NG**Repair or replace harness or connectors.****OK****Check and replace theft deterrent ECU.*1**

*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown on matrix chart (See page [DI-273](#)).