

Taillight Control Relay Circuit


CIRCUIT DESCRIPTION

When the theft deterrent system is activated, it causes the Tr in the ECU to switch on and off at approximately 0.4 sec. intervals. This switches the taillight control relay on and off, thus flashing the taillights (See the wiring diagram below).

In this condition, if any of the following operations is done, the Tr in the ECU goes off and the taillight control relay switches off, thus stopping the taillights flashing:

- (1) Unlock the front LH or RH door with key.
- (2) Turn the ignition switch to ACC or ON position.
- (3) Unlock the doors with the wireless door lock control system.
- (4) Wait for approximately 1 minute.

WIRING DIAGRAM

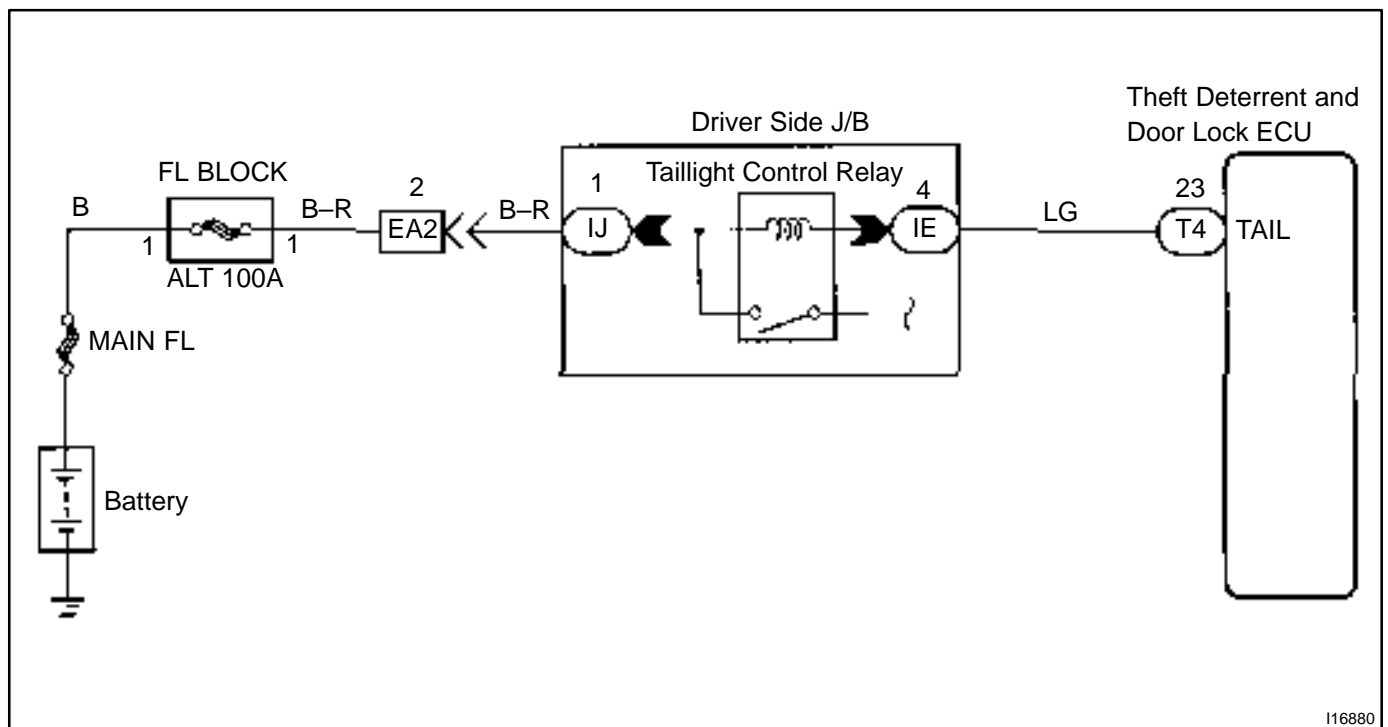


I16880

INSPECTION PROCEDURE

HINT:

The flow chart below is based on the premise that the taillights light up normally whenever the light control switch is operated. If headlight operation is not normal when the light control switch is operated, proceed to troubleshooting on page [BE-2](#).

- | | |
|----------|--|
| 1 | Check voltage between terminal TAIL of theft deterrent ECU connector and body ground. |
|----------|--|

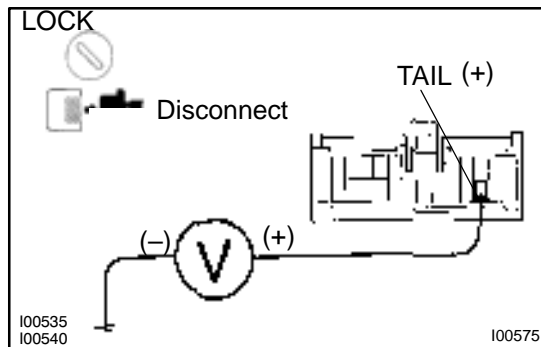

PREPARATION:

- (a) Remove the glove compartment door.
- (b) Disconnect the theft deterrent ECU connector.

CHECK:

Measure voltage between terminal TAIL of theft deterrent ECU connector and body ground.

OK:

Voltage: 10 – 14 V

OK

Check and replace theft deterrent ECU.

OK

Check and repair harness and connector between theft deterrent ECU and taillight control relay (See page [IN-27](#)).