

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and trouble-shoot for each circuit.

### HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Details of Problem			Inspecting Circuit*1	See page
The theft deterrent system cannot be set			1. Indicator light circuit	<a href="#">DI-274</a>
			2. Luggage compartment door key lock and unlock switch circuit	<a href="#">DI-289</a>
			3. Luggage compartment door courtesy switch circuit	<a href="#">DI-291</a>
			4. Door courtesy switch circuit	<a href="#">DI-293</a>
			5. Door unlock detection switch circuit	<a href="#">DI-295</a>
			6. Engine hood courtesy switch circuit	<a href="#">DI-297</a>
The indicator light does not blink when system is set			Indicator light circuit	<a href="#">DI-274</a>
When the system is set	When the rear door is unlocked	The system does not operate	Door unlock detection switch circuit	<a href="#">DI-295</a>
	When the luggage compartment door is opened by a method other than the key		Luggage compartment door courtesy switch circuit	<a href="#">DI-291</a>
	When the engine hood is opened		Engine hood courtesy switch circuit	<a href="#">DI-297</a>
While the system is in warning operation		Horns do not sound	Horn relay circuit	<a href="#">DI-280</a>
		Theft deterrent horn does not sound	Theft deterrent horn circuit	<a href="#">DI-278</a>
		Headlights do not flash	Headlight control relay circuit	<a href="#">DI-282</a>
		Taillights do not flash	Taillight control relay circuit	<a href="#">DI-284</a>
		The starter cut is not cut off	Starter relay circuit	<a href="#">DI-276</a>
		The rear door lock is not locked in unlock condition	Door unlock detection switch circuit	<a href="#">DI-295</a>
When the system is set	It is not canceled when the ignition key is turned to ACC or ON position		Ignition switch circuit	<a href="#">DI-286</a>
	It still operates when the luggage compartment door is opened with the key		Luggage compartment door key lock and unlock switch circuit	<a href="#">DI-289</a>
System is still set even when a rear door is open			Door courtesy switch circuit	<a href="#">DI-293</a>
Even when the system is not set		Horns sound	Horn relay circuit	<a href="#">DI-280</a>
		Theft deterrent horn sounds	Theft deterrent horn circuit	<a href="#">DI-278</a>
		Headlights stay on	Headlight control relay circuit	<a href="#">DI-282</a>
		Taillights stay on	Taillight control relay circuit	<a href="#">DI-284</a>

\*1: If numbers are given to the circuit proceed with troubleshooting in the order indicated by those numbers.