


TERMINALS OF ECM

Theft Deterrent and Door Lock Control ECU

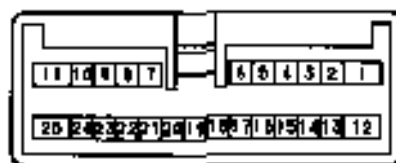

Connector "B"



Connector "A"

I00302 I00303

I00304

Symbols (Terminals No.)	Wiring Color	Condition	STD Value
+B ↔ Ground (A1 ↔ Ground)	L-Y ↔ Ground	Always.	10 – 14 V
CTY ↔ E (A3 ↔ B4)	R-W ↔ W-B	Door courtesy switch "OFF" (Door closed)	1 MΩ or higher
		Door courtesy switch "ON" (Door opened)	Below 1 Ω
DSWL ↔ E (A4 ↔ B4)	R-Y ↔ W-B	Luggage compartment door courtesy switch "OFF" (Door closed)	1 MΩ or higher
		Luggage compartment door courtesy switch "ON" (Door opened)	Below 1 Ω
L1 ↔ E (A5 ↔ B4)	R-Y ↔ W-B	Door lock control switch "LOCK"	Below 1 Ω
		Door lock control switch "OFF" or "UNLOCK"	1 MΩ or higher
UL3 ↔ E (A6 ↔ B4)	W-L ↔ W-B	Door key lock and unlock switch "UNLOCK" (Driver's door)	Below 1 Ω
		Door key lock and unlock switch "LOCK" or "OFF" (Driver's door)	1 MΩ or higher
DSWD ↔ E (A7 ↔ B4)	R ↔ W-B	Door courtesy switch "ON" (Driver's door opened)	Below 1 Ω
		Door courtesy switch "OFF" (Driver's door closed)	1 MΩ or higher
UL1 ↔ E (A8 ↔ B4)	G-Y ↔ W-B	Door lock control switch "UNLOCK"	Below 1 Ω
		Door lock control switch "OFF" or "LOCK"	1 MΩ or higher
HEAD ↔ E (A10 ↔ B4)	R-L ↔ W-B	Light control switch other than "HEAD"	10 – 14 V
		Always	10 – 14 V
SH ↔ E (A11 ↔ B4)	V-W ↔ W-B	Always	10 – 14 V
IND ↔ E (A12 ↔ B4)	GR-R ↔ W-B	Ignition switch "OFF"	1 MΩ or higher
DSWH ↔ E (A14 ↔ B4)	LG-B ↔ W-B	Engine hood courtesy switch "ON"	Below 1 Ω
		Engine hood courtesy switch "OFF"	1 MΩ or higher
LSWD ↔ E (A15 ↔ B4)	P-L ↔ W-B	Door unlock detection switch "ON" (Driver's door)	Below 1 Ω
		Door unlock detection switch "OFF" (Driver's door)	1 MΩ or higher
UL2 ↔ E (A16 ↔ B4)	W-L ↔ W-B	Door key lock and unlock switch "UNLOCK" (Passenger's door)	Below 1 Ω
		Door key lock and unlock switch "LOCK" or "OFF" (Passenger's door)	1 MΩ or higher

DSWP ↔ E (A19 ↔ B4)	R ↔ W-B	Door courtesy switch "ON" (Passenger's door opened)	Below 1 Ω
		Door courtesy switch "OFF" (Passenger's door closed)	1 MΩ or higher
KSW ↔ E (A20 ↔ B4)	LG ↔ W-B	Key unlock warning switch "ON" (Key is inserted into key cylinder)	Below 1 Ω
		Key unlock warning switch "OFF"	1 MΩ or higher
LSWP ↔ E (A21 ↔ B4)	P ↔ W-B	Door unlock detection switch "OFF" (Passenger's door)	1 MΩ or higher
		Door unlock detection switch "ON" (Passenger's door)	Below 1 Ω
L2 ↔ E (A22 ↔ B4)	W-G ↔ W-B	Door key lock and unlock switch "LOCK"	Below 1 Ω
		Door key lock and unlock switch "UNLOCK" or "OFF"	1 MΩ or higher
TAIL ↔ E (A23 ↔ B4)	LG ↔ W-B	Always	10 – 14 V
HORN ↔ E (A24 ↔ B4)	G-Y ↔ W-B	Always	10 – 14 V
SRLY ↔ E (A25 ↔ B4)	B-R ↔ W-B	Ignition switch "ST" (When park/ neutral position switch "P")	10 – 14 V
ACT- ↔ ACT+ (B2 ↔ B3)	R ↔ G	Ignition switch "OFF"	Below 50 Ω
E ↔ Ground (B4 ↔ Ground)	W-B ↔ Ground	Always	Below 1 Ω
ACC ↔ E (B8 ↔ B4)	GR ↔ W-B	Ignition switch "ACC"	10 – 14 V
+B2 ↔ Ground (B9 ↔ Ground)	L ↔ Ground	Always	10 – 14 V