

POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION

EC07D-01


1. REMOVE PCV VALVE
2. ATTACH CLEAN HOSE TO PCV VALVE
3. BLOW AIR FROM CYLINDER HEAD SIDE

Check that air passes through easily.

NOTICE:

Do not suck air through the valve.

Petroleum substances inside the valve are harmful.

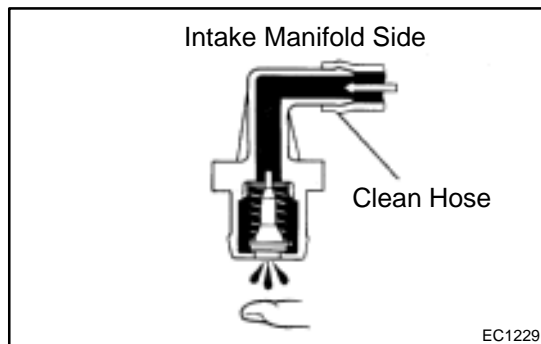


4. BLOW AIR FROM INTAKE MANIFOLD SIDE

Check that air passes through with difficulty.

If the PCV valve fails either of the checks, replace it.

5. REINSTALL PCV VALVE

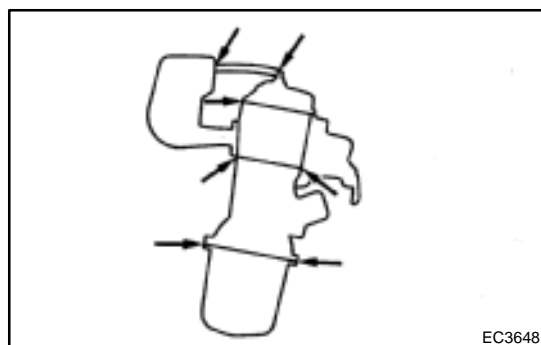

6. VISUALLY INSPECT HOSES, CONNECTIONS AND GASKETS

Check for cracks, leaks or damage.