


DISASSEMBLY

1. REMOVE NO.2 ENGINE HANGER
2. REMOVE STUD BOLT FOR CYLINDER HEAD COVER
3. REMOVE VALVE LIFTERS AND SHIMS

HINT:

Arrange the valve lifters and shims in correct order.

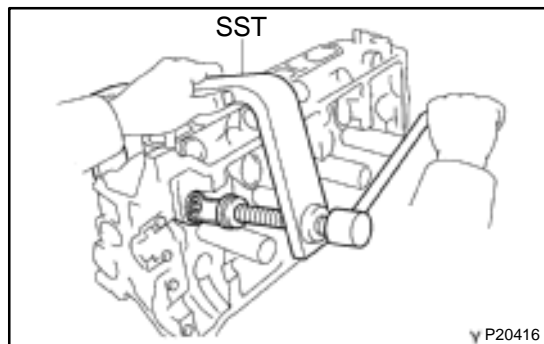


4. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.
SST 09202-70020
- (b) Remove the spring retainer, valve spring, valve and spring seat.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in correct order.

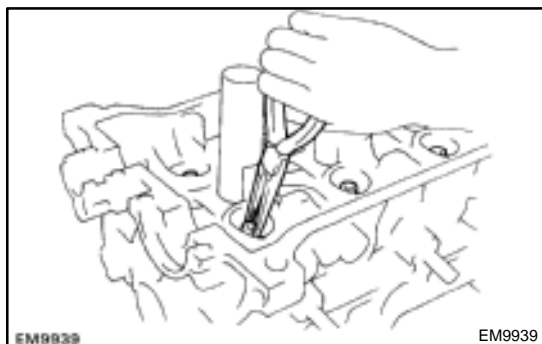

- (c) Using needle-nose pliers, remove the oil seal.