


EXHAUST SYSTEM COMPONENTS

EM1AI-01

California

HINT:

- Before installing the heated oxygen sensor (bank1 sensor2) sensor, twist the sensor wire counterclockwise 3 and 1/2 turns.
- After installing the heated oxygen sensor (bank1 sensor2), check that the sensor wire is not twisted. If it is twisted, remove the heated oxygen sensor (bank1 sensor2) and reinstall it.

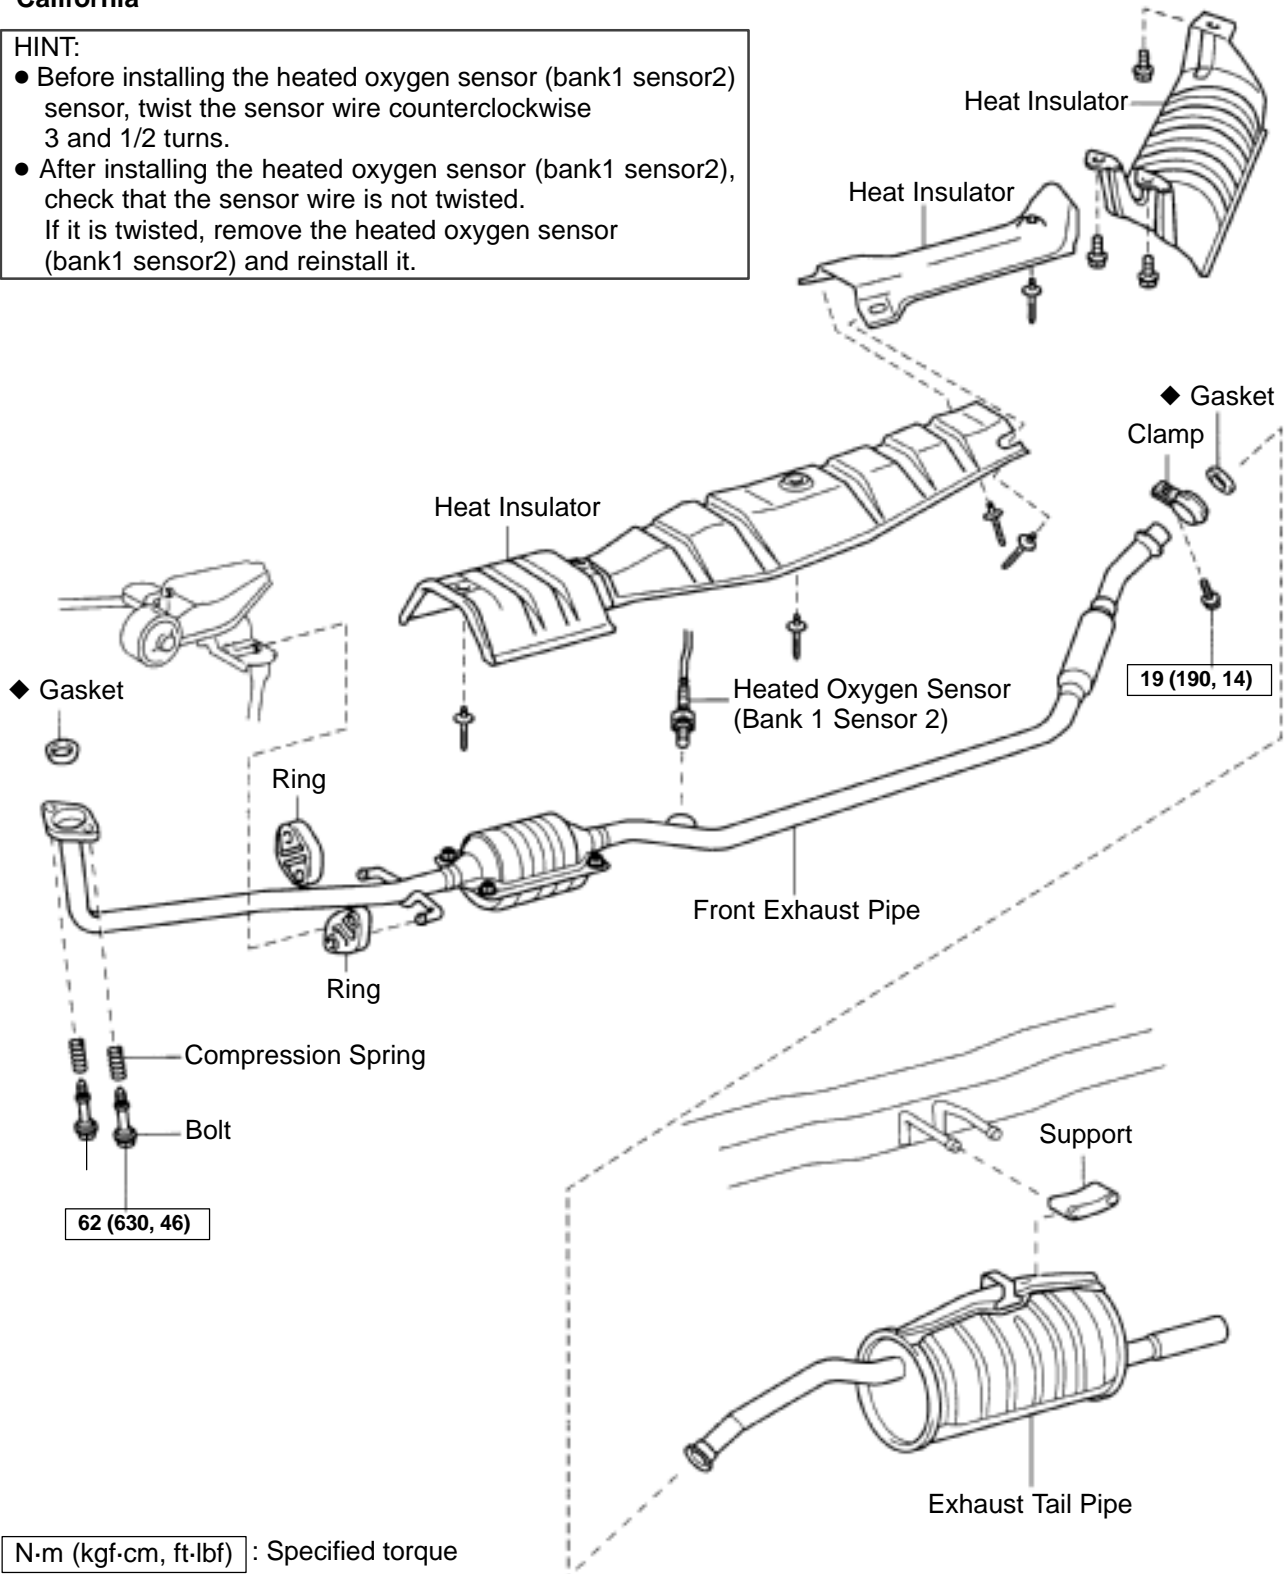

A05557