

## REMOVAL

### REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the camshaft position sensor connector.
- (b) Remove the bolt and camshaft position sensor.

**Torque: 8 N·m (80 kgf·cm, 69 in.-lbf)**