



REMOVAL

1. DISCONNECT HIGH-TENSION CORDS FROM IGNITION COILS

(See page [IG-1](#))

2. REMOVE IGNITION COILS

- (a) Disconnect the 2 connectors from the ignition coils.
- (b) Remove the 2 bolts and 2 ignition coils from cylinder head.

Torque: 8.5 N·m (85 kgf·cm, 70 in.-lbf)

HINT:

Arrange the ignition coils in correct order.