


VEHICLE LIFT AND SUPPORT LOCATIONS

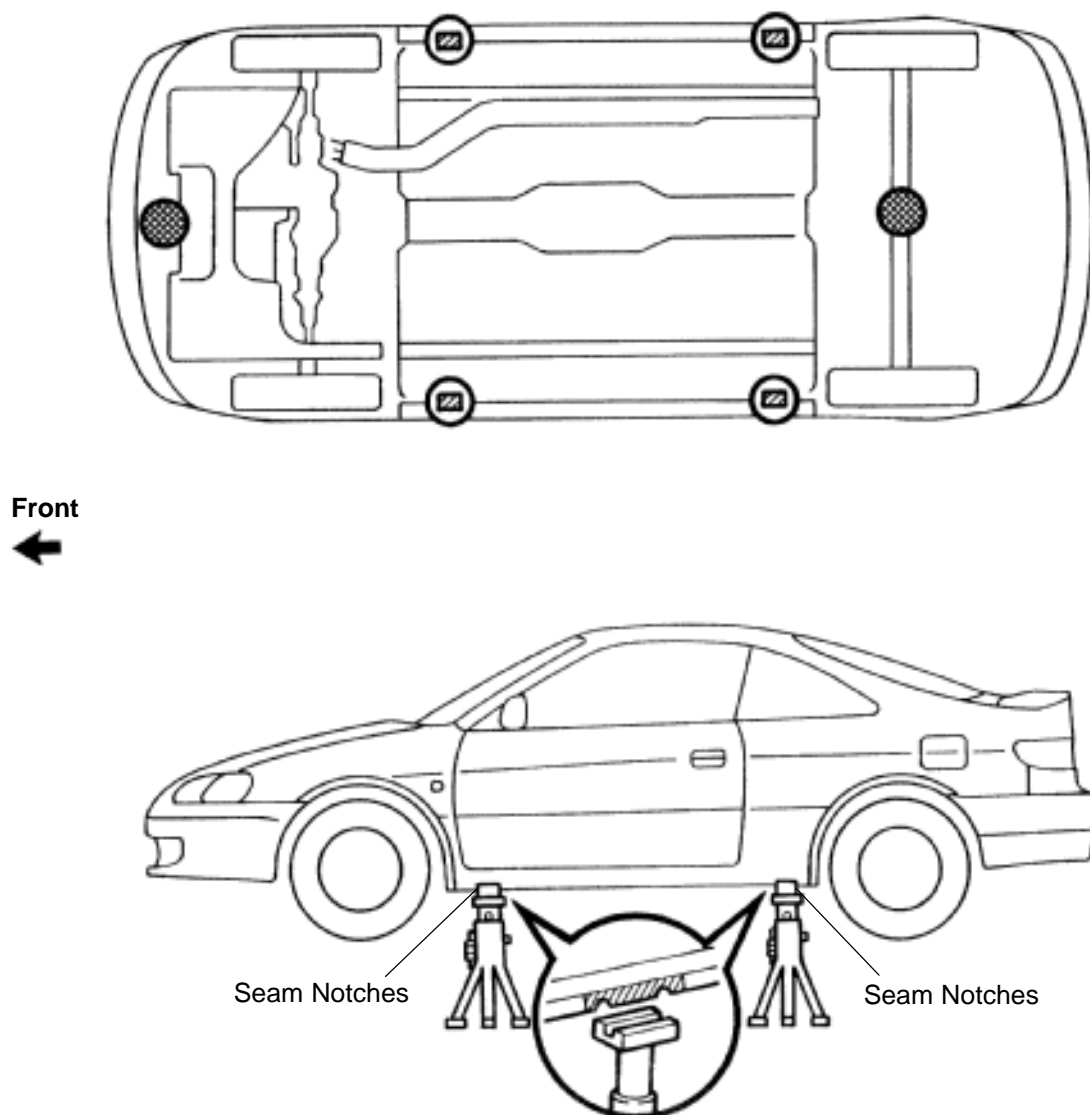

JACK POSITION

Front - - - - - Front crossmember
Rear - - - - - Rear axle beam


CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift - - - - -

PLATE TYPE LIFT

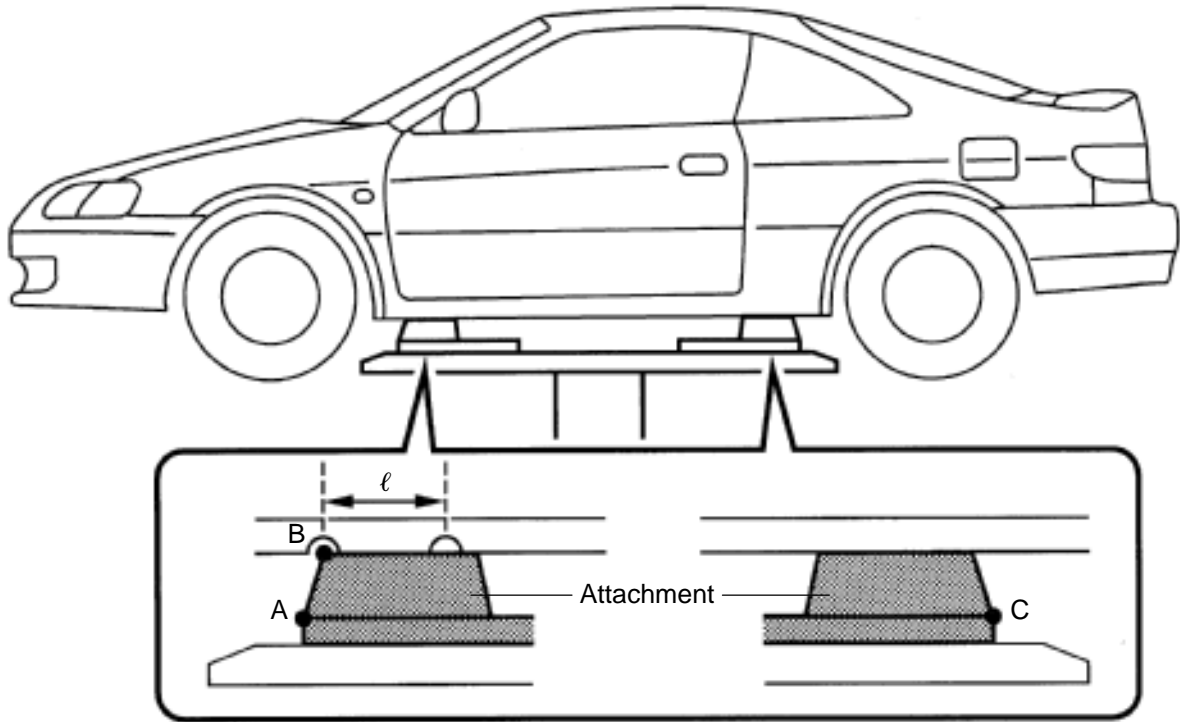**HINT :**

Left and right set position
Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point (ℓ).

Attachment dimensions

