

# TERMS

## ABBREVIATIONS USED IN THIS MANUAL

IN07H-01

Abbreviations	Meaning
ABS	Anti-Lock Brake System
ALR	Automatic Locking Retractor
A/T	Automatic Transmission (Transaxle)
ATF	Automatic Transmission Fluid
BDC	Bottom Dead Center
BTDC	Before Top Dead Center
Calif.	California
CB	Circuit Breaker
CRS	Child Restraint System
CVJ	Constant Velocity Joint
DP	Dash Pot
ECU	Electronic Control Unit
ELR	Emergency Locking Retractor
ESA	Electronic Spark Advance
EX	Exhaust (Manifold, Valve)
FIPG	Formed in Place Gasket
FL	Fusible Link
FR, Fr	Front
IG	Ignition
I/A	Integrated Ignition Assembly
IN	Intake (Manifold, Valve)
INT	Intermittent
J/B	Junction Block
LED	Light Emitting Diode
LH	Left-Hand
LSPV	Load Sensing Proportioning Valve
LHD	Left-Hand Drive
LLC	Long Life Coolant (Year Around Coolant)
Max.	Maximum
Min.	Minimum
MP	Multipurpose
M/T	Manual Transmission (Transaxle)
O/D, OD	Overdrive
O/S	Oversize
PCV	Positive Crankcase Ventilation
PKB	Parking Brake
PS	Power Steering
RH	Right-Hand
RR, Rr	Rear
SC	Spark Control
SRS	Supplemental Restraint System
SSM	Special Service Materials

## INTRODUCTION – TERMS

SST	Special Service Tools
STD	Standard
SW	Switch
TDC	Top Dead Center
TEMP.	Temperature
T/M	Transmission
U/S	Undersize
VCV	Vacuum Control Valve
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without