



DISASSEMBLY

REMOVE PRESSURE REGULATOR VALVE

- (a) Using snap ring pliers, remove the snap ring.
- (b) Remove the retainer, spring and pressure regulator valve piston.