

REASSEMBLY

INSTALL PRESSURE REGULATOR VALVE

- (a) Insert the pressure regulator valve piston, spring and retainer.
- (b) Using snap ring pliers, install the snap ring.