


ENGINE INSPECTION

MA00R-10

HINT:

Inspect these items when the engine is cold.

1. **REPLACE TIMING BELT**
(See page [EM-13](#))
2. **INSPECT DRIVE BELTS**
Generator: (See page [CH-2](#))
PS : (See page [SR-3](#))
A/C : (See page [AC-16](#))

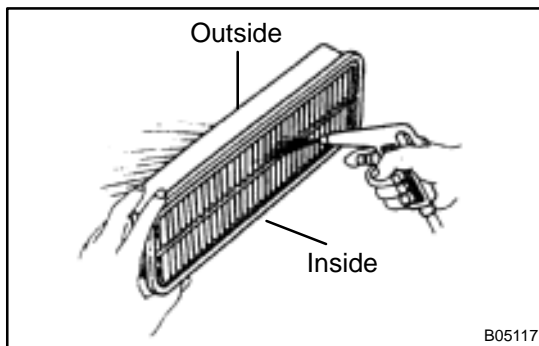

3. **INSPECT AIR FILTER**
 - (a) Visually check that the air filter is not excessively dirty, damaged or oily.
If necessary, replace the air filter.
 - (b) Clean the air filter with compressed air.
First blow from the upper side thoroughly, then blow off the lower side of the air filter.
4. **REPLACE AIR FILTER**
Replace the air filter with a new one.
5. **REPLACE SPARK PLUGS**
(See page [IG-1](#))
6. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-1](#))
7. **REPLACE ENGINE COOLANT**
(See page [CO-2](#))
8. **INSPECT CHARCOAL CANISTER**
(See page [EC-5](#))
9. **REPLACE GASKET IN FUEL TANK CAP**
(See page [EC-5](#))
10. **INSPECT FUEL LINES AND CONNECTIONS**
(See page [EC-5](#))
11. **INSPECT EXHAUST PIPES AND MOUNTINGS**
(See page [EC-7](#))
12. **ADJUST VALVE CLEARANCE**
(See page [EM-5](#))