



MANUAL TRANSAXLE ASSEMBLY COMPONENTS

MX06V-01

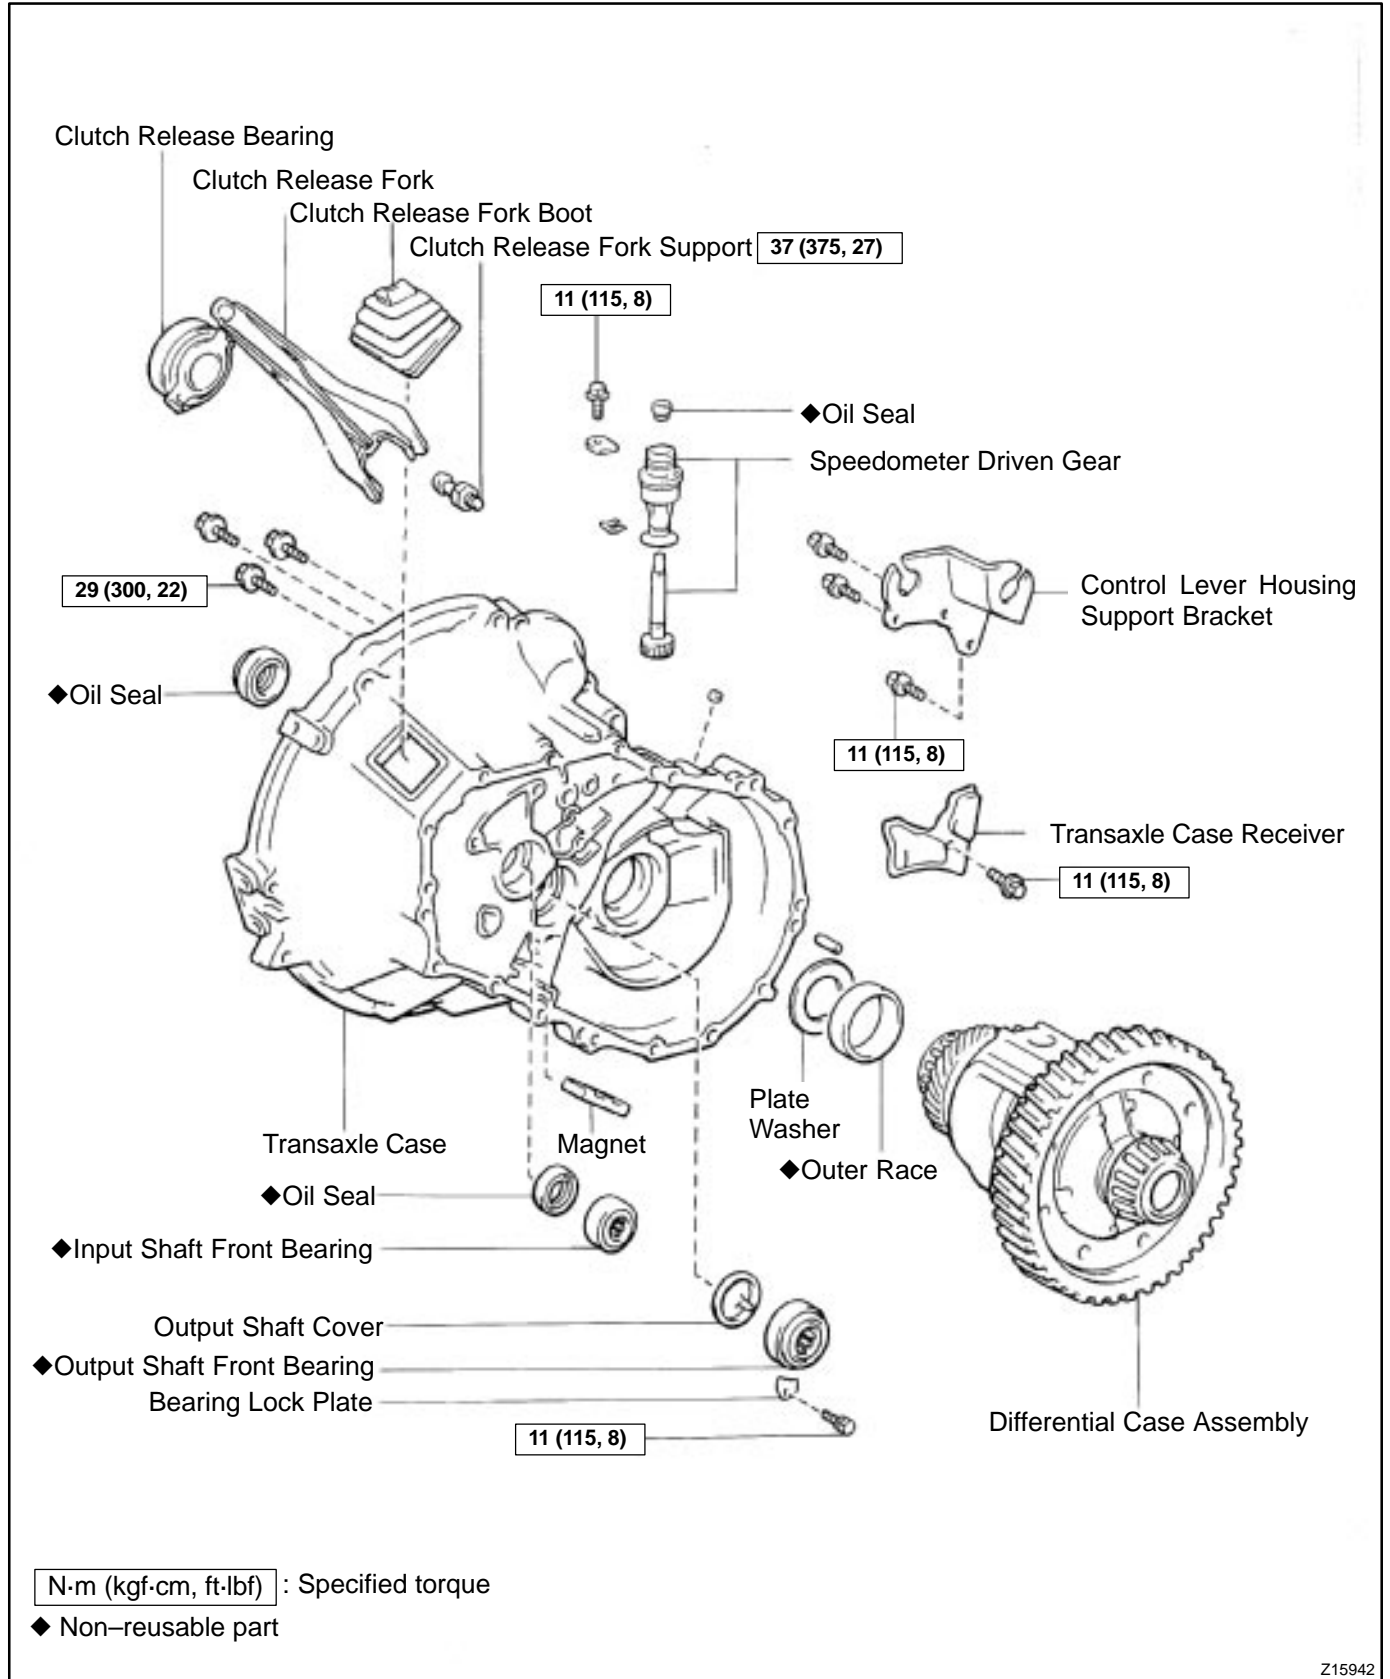


Z15942

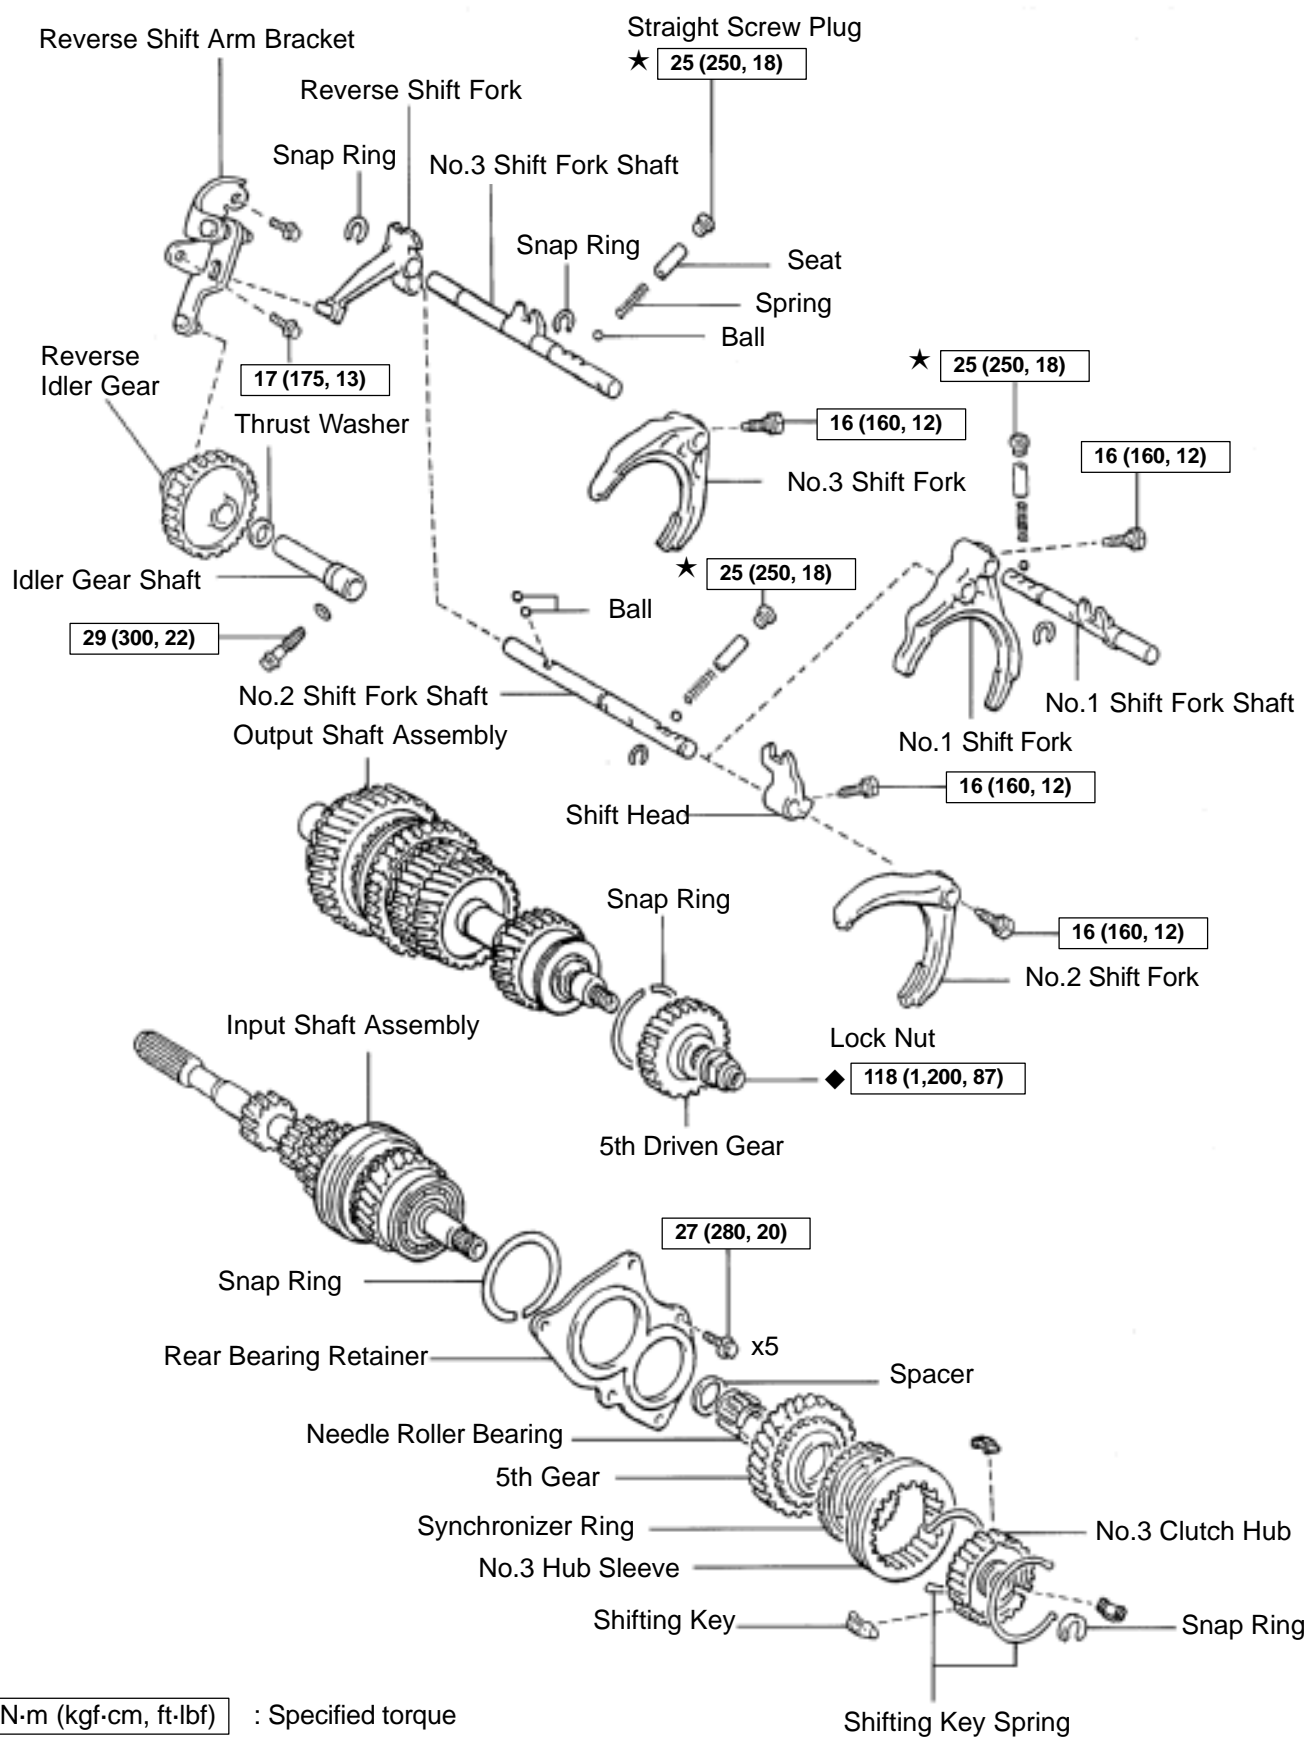

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Precoated part

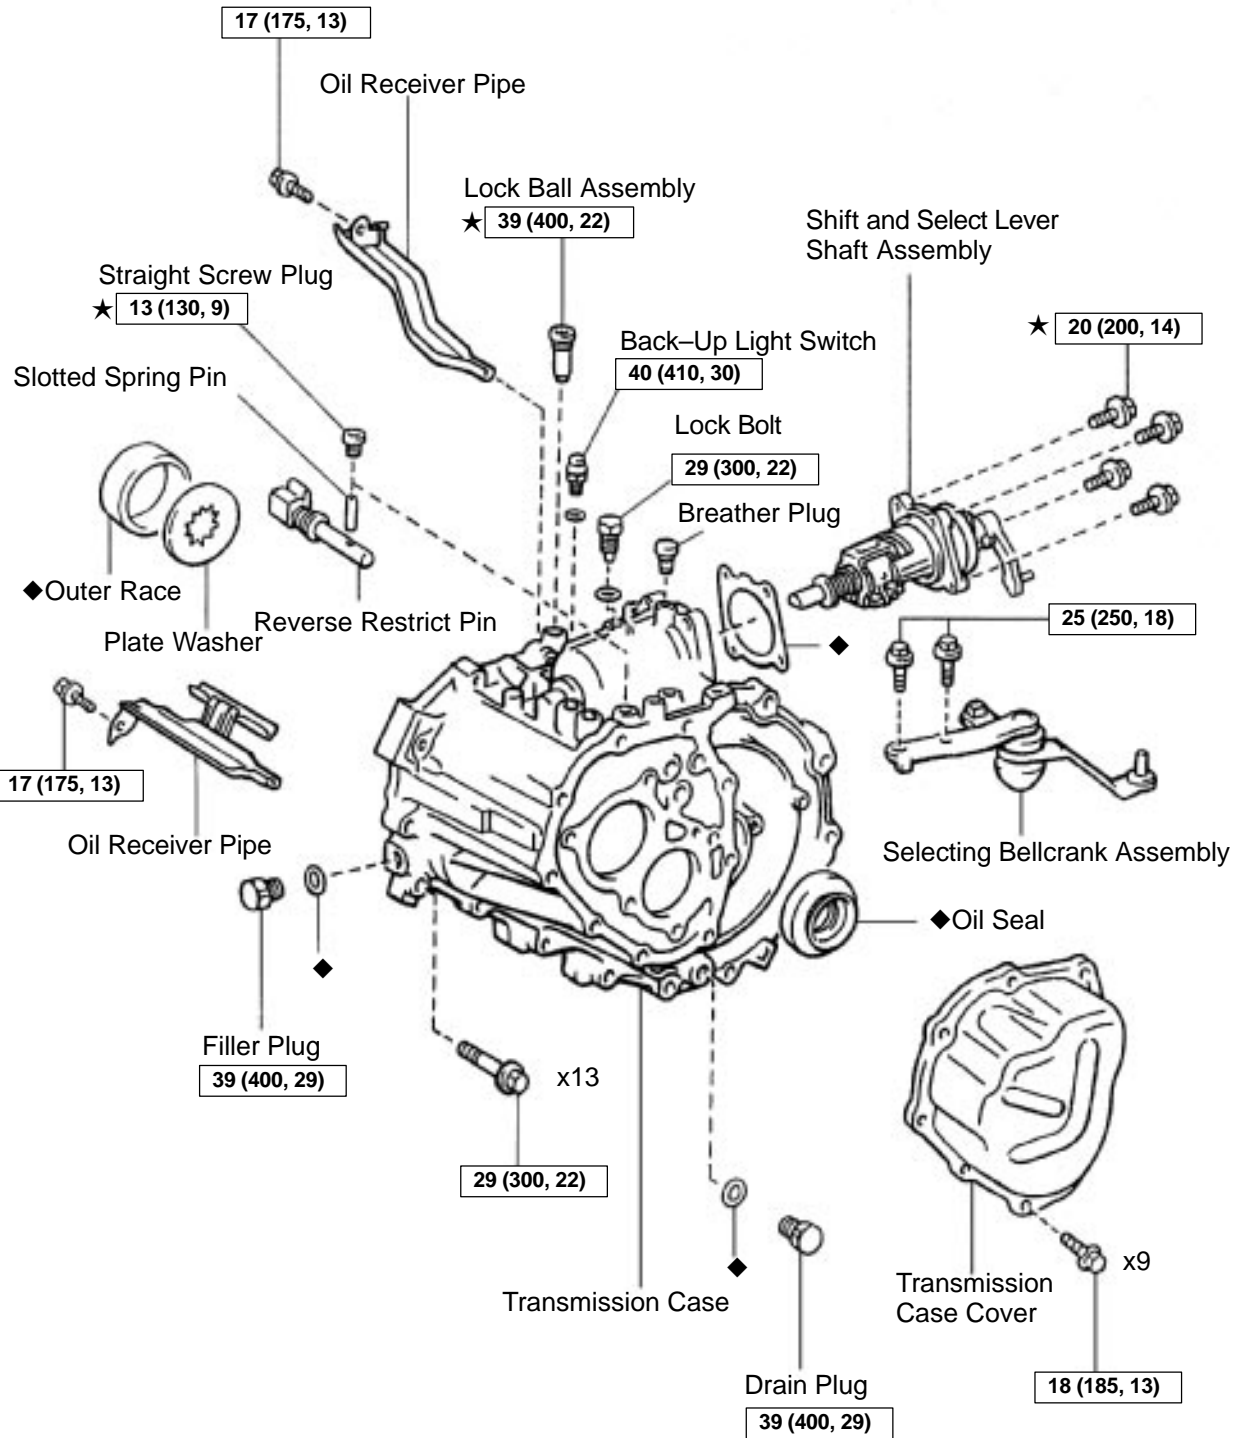

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Precoated part