

## INSTALLATION

Installation is in the reverse order of removal (See page [MX-3](#)).

HINT:

After installation, check and inspect items as follows.

- Front wheel alignment (See page [SA-4](#)).
- Do the road test.