



 


 




AUTOMATIC TRANSAXLE

SST (Special Service Tools)

PP203-01

	09201-10000 Valve Guide Bushing Remover & Replacer Set	
	(09201-01080) Valve Guide Bushing Remover & Replacer 8	
	09308-00010 Oil Seal Puller	
	09350-30020 TOYOTA Automatic Transmission Tool Set	
	(09351-32010) One-way Clutch Test Tool	
	(09351-32020) Stator Stopper	
	09350-32014 TOYOTA Automatic Transmission Tool Set	
	(09351-32130) Handle	
	(09351-32150) Oil Seal Replacer	
	09921-00010 Spring Tension Tool	