










 


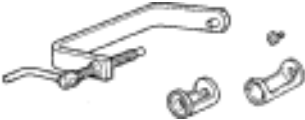










 

ENGINE MECHANICAL






SST (Special Service Tools)

PP1A5-01

	09201-10000 Valve Guide Bushing Remover & Replacer Set	
	(09201-01060) Valve Guide Bushing Remover & Replacer 6	
	09202-70020 Valve Spring Compressor	
	09213-14010 Crankshaft Pulley Holding Tool	
	09221-25026 Piston Pin Remover & Replacer	
	(09221-00020) Body	
	(09221-00030) Spring	
	(09221-00130) Guide "G"	
	(09221-00140) Guide "H"	
	(09221-00150) Bushing "D"	
	09223-15030 Oil Seal & Bearing Replacer	
	09248-55040 Valve Clearance Adjust Tool Set	

PREPARATION – ENGINE MECHANICAL

	(09248-05410) Valve Lifter Press	
	(09248-05420) Valve Lifter Stopper	
	09309-37010 Transmission Bearing Replacer	Crankshaft front oil seal
	09330-00021 Companion Flange Holding Tool	Crankshaft pulley
	09550-10012 Replacer Set "B"	
	(09252-10010) No. 1 Replacer Handle	Valve guide bushing Spark plug tube gasket crankshaft rear oil seal
	(09556-10010) Differential Drive Pinion Front Bearing Remover	Spark plug tube gasket
	09816-30010 Oil Pressure Switch Socket	Knock sensor Oil pressure switch
	09843-18020 Diagnosis Check Wire	
	09950-50010 Puller C Set	
	(09951-05010) Hanger 150	Crankshaft pulley
	(09952-05010) Slide Arm	Crankshaft pulley
	(09953-05020) Center Bolt 150	Crankshaft pulley

	(09954-05020) Claw No.2	Crankshaft pulley
	09960-10010 Variable Pin Wrench Set	
	(09962-01000) Variable Pin Wrench Arm Assy	Camshaft timing pulley Camshaft sub-gear
	(09963-01000) Pin 10	Camshaft timing pulley
	(09963-00500) Pin 5	Camshaft sub-gear