







 








 









MANUAL TRANSAXLE

 
SST (Special Service Tools)

PP202-01

	09201-10000	Valve Guide Bushing Remover & Replacer Set	Speedometer driven gear oil seal
	(09201-01080)	Valve Guide Bushing Remover & Replacer 8	
	09308-00010	Oil Seal Puller	Output shaft front bearing
	09309-12020	5th Driven Gear Replacer	
	09350-32014	TOYOTA Automatic Transmission Tool Set	
	(09351-32090)	Oil Seal Remover & Replacer	Differential side bearing
	(09351-32111)	Side Bearing Race Replacer	Differential side bearing oil seal (Transmission case side)
	(09351-32120)	Overdrive Bearing Replacer	Differential side bearing
	(09351-32130)	Handle	
	(09351-32150)	Oil Seal Replacer	Differential side bearing oil seal (Transaxle case side)
	09564-32011	Differential Preload Adaptor	
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	Input shaft rear ball bearing 4th driven gear and rear ball bearing

	09612-22011 Tilt Handle Bearing Replacer	No.3 hub sleeve assembly
	09612-65014 Steering Worm Bearing Puller	Input shaft front bearing and oil seal Differential taper roller bearing outer race
	09921-00010 Spring Tension Tool	Speedometer driven gear oil seal
	09950-00020 Bearing Remover	
	09950-00030 Bearing Remover Attachment	
	09950-60010 Replacer Set	
	(09951-00360) Replacer 36	Input shaft front oil seal Differential case side bearing
	(09951-00460) Replacer 46	Input shaft front bearing
	(09951-00620) Replacer 62	Output shaft front bearing
	09950-60020 Replacer Set No.2	
	(09951-00680) Replacer 68	Differential taper roller bearing outer race (Transaxle case side)
	(09951-00710) Replacer 71	Differential taper roller bearing outer race (Transmission case side)
	09950-70010 Handle Set	

PREPARATION – MANUAL TRANSAXLE

	(09951-07150) Handle 150	
---	--------------------------	--