


 






 
















STEERING


 



 
 


 



SST (Special Service Tools)

PP18J-01












	09608-04031	Front Hub Inner Bearing Cone Replacer	PS vane pump
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear
	09612-22011	Tilt Handle Bearing Replacer	Steering column PS gear
	09612-24014	Steering Gear Housing Overhaul Tool Set	
	(09612-10061)	Steering Pinion Bearing Replacer	PS gear
	09612-65014	Steering Worm Bearing Puller	PS gear
	(09612-01030)	Claw "C"	PS gear
	09613-12010	Power Steering Control Valve Puller	PS gear
	09616-00010	Steering Worm Bearing Adjusting Socket	PS gear
	09631-10030	Oil Seal Remover	PS vane pump
	09631-10041	Steering Rack Cover "D"	PS gear
	09631-12071	Steering Rack Oil Seal Test Tool	PS gear

PREPARATION – STEERING

	09631-20081 Seal Ring Tool	PS gear
	09631-20090 Cylinder End Stopper Nut Wrench	PS gear
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	PS gear
	09633-00020 Power Steering Hose Nut Wrench	PS gear
	09640-10010 Power Steering Pressure Gauge Set	
	(09641-01010) Gauge Assy	Power steering fluid
	(09641-01030) Attachment B	Power steering fluid
	(09641-01060) Attachment E	Power steering fluid
	09922-10010 Variable Open Wrench	PS gear
	09950-40011 Puller B Set	
	(09951-04010) Hanger 150	PS gear
	(09952-04010) Slide Arm	PS gear
	(09953-04020) Center Bolt 150	PS gear

	(09954-04010) Arm 25	PS gear
	(09955-04050) Claw No.5	PS gear
	(09957-04010) Attachment	PS gear
	(09958-04010) Holder	PS gear
	09950-50010 Puller C Set	
	(09951-05010) Hanger 150	Steering column
	(09952-05010) Slide Arm	Steering column
	(09953-05020) Center Bolt 150	Steering column
	(09954-05020) Claw No.2	Steering column
	09950-60010 Replacer Set	
	(09951-00200) Replacer 20	PS gear
	(09951-00230) Replacer 23	PS gear
	(09951-00240) Replacer 24	PS gear

PREPARATION – STEERING

	(09951-00330) Replacer 33	PS vane pump
	(09951-00340) Replacer 34	PS gear
	(09951-00380) Replacer 38	PS gear
	(09952-06010) Adapter	PS gear
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump
	(09951-07150) Handle 150	PS gear
	(09951-07360) Handle 360	PS gear
	09960-10010 Variable Pin Wrench Set	
	(09962-01000) Variable Pin Wrench Arm Assy	PS vane pump
	(09963-01000) Pin 10	PS vane pump