

## REMOVAL


### NOTICE:

- Do not open the cover or the case of the ECU and various computers unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- Never use SRS parts from another vehicle. When replacing parts, replace with new ones.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

### 1. REMOVE THESE PARTS

(See page [BO-51](#))

- Console box
- Center cluster finish panel
- Lower center finish panel
- Rear air duct No. 3

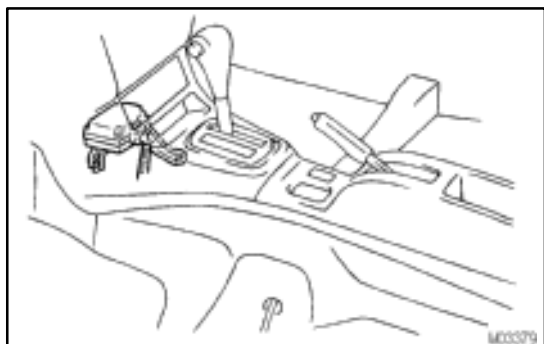

### 2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the connectors.

### NOTICE:

**Remove the connector with the sensor assembly installed.**

- (b) Using a torx wrench remove the 3 screws and the airbag sensor assembly.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)