


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

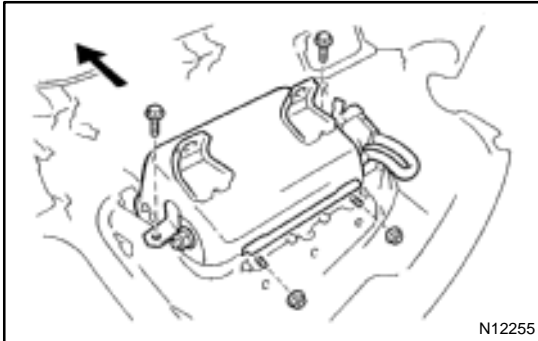

1. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**
 - (a) Install the airbag door.
 - (b) Install the front passenger airbag assembly, with 2 bolts and nuts to the instrument panel.

Torque: 5.5 N·m (56 kgf-cm, 49 in.-lbf)

NOTICE:

- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

2. **INSTALL INSTRUMENT PANEL**


(See page [BO-51](#))

Install the 2 bolts to instrument panel reinforcement.

Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)

NOTICE:

- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

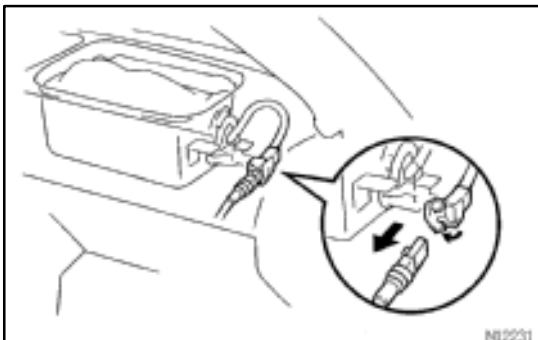

3. **CONNECT AIRBAG CONNECTOR**

- (a) Connect the airbag connector.
- (b) Install the lower finish panel (See page [BO-51](#)).
- (c) Connect the airbag connector.
- (d) Put the connector on the glove compartment door finish plate.
- (e) Install the glove compartment door finish plate to the glove compartment box.