


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace with new parts.

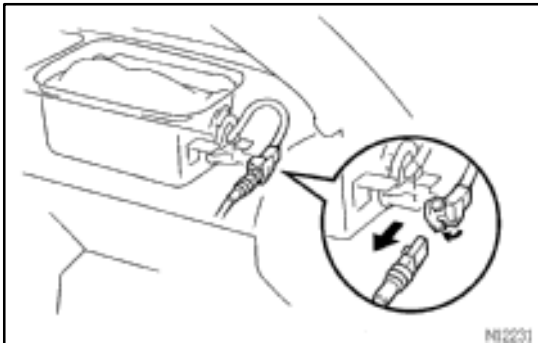


1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the lower finish panel (See page [BO-51](#)).
- (b) Disconnect the airbag connector.
- (c) Remove the 2 bolts from the instrument panel reinforcement.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

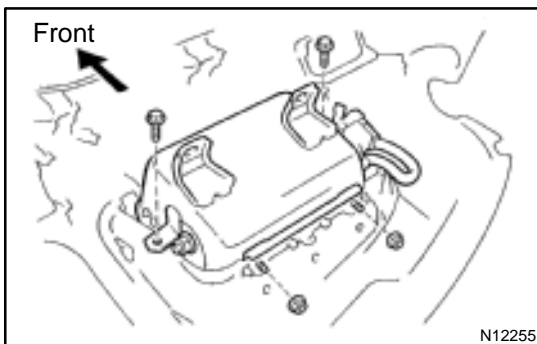

2. REMOVE INSTRUMENT PANEL(See page [BO-51](#))

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts, 2 nuts and front passenger airbag assembly.
- (b) Remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down
- Never disassemble the front passenger airbag assembly.