



REMOVAL

1. REMOVE STEERING KNUCKLE WITH AXLE HUB (See page [SA-10](#))
2. REMOVE LOWER BALL JOINT
 - (a) Remove the clip and nut.
Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)
 - (b) Using SST, remove the lower ball joint.
SST 09628-62011