



DISASSEMBLY

REMOVE COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (b) Install 2 nuts and bolt to the bracket at the lower part of the shock absorber and secure it in a vise.
- (c) Remove the lock nut in the center of the suspension support.
- (d) Remove the suspension support.
- (e) Remove the dust seal.
- (f) Remove the spring seat.
- (g) Remove the upper insulator.
- (h) Remove the coil spring.
- (i) Remove the spring bumper.
- (j) Remove the lower insulator.