


FRONT WHEEL HUB BOLT REPLACEMENT


1. **REMOVE FRONT WHEEL**
2. **REMOVE BRAKE CALIPER AND DISC**
 - (a) Remove the 2 bolts, brake caliper and disc.
 - (b) Support the brake caliper securely.

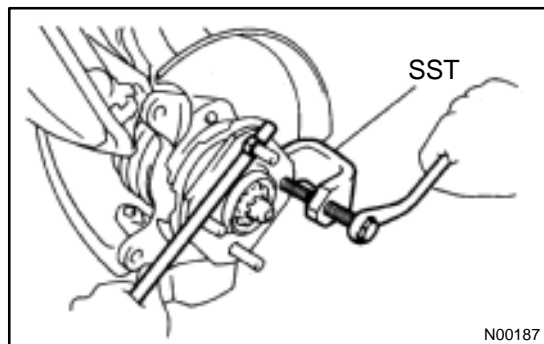

3. **REMOVE HUB BOLT**

Using SST, remove the hub bolt.

SST 09628-10011

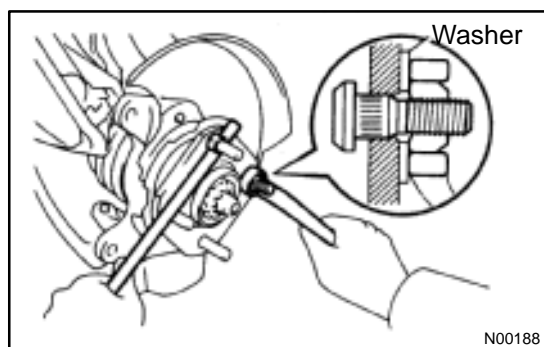

4. **INSTALL HUB BOLT**

Install washer and nut to the hub bolt, as shown in the illustration, and install the hub bolt with torquing the nut.

5. **INSTALL DISC AND BRAKE CALIPER**

Install the disc, brake caliper and 2 bolts.

Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)

6. **INSTALL FRONT WHEEL**

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)