



DISASSEMBLY

1. REMOVE OIL SEAL AND INNER BEARING

(a) Using SST, remove the oil seal.

SST 09308-00010

(b) Remove the inner bearing.

2. REMOVE OUTER RACES

Using a brass bar and hammer, remove the 2 outer races.