

REASSEMBLY


1. INSTALL NEW BEARING OUTER RACES

(a) Inside:

Using SST and a press, install new bearing outer race.
 SST 09950-60010 (09951-00460), 09950-70010
 (09951-07150)

(b) Outside:

Using SST and a press, install new bearing outer race.
 SST 09550-10012 (09552-10010, 09553-10010)

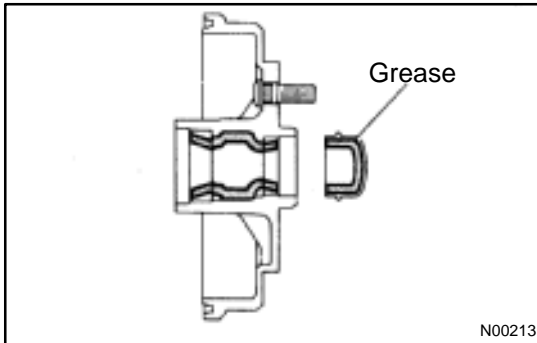

2. PACK BEARINGS WITH GREASE

(a) Prepare MP grease in the palm of your hand.


(b) Pack grease into the bearing, continuing until the grease oozes out from the other side.

(c) Do the same around the bearing circumference.

3. INSTALL OIL SEAL

(a) Pack the inside of the axle hub and grease cap with MP grease, as shown in the illustration.

(b) Install the inner bearing.

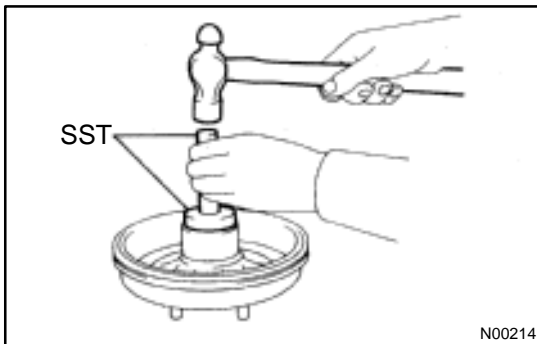

(c) Using SST and a hammer, install a new oil seal.

SST 09550-10012 (09552-10010, 09557-10010)

(d) Coat the oil seal lip with MP grease.