

## REMOVAL


### REMOVE LATERAL CONTROL ROD

- (a) Remove the nut and bolt and disconnect the lateral control rod from the body.

**Torque: 113 N·m (1,150 kgf·cm, 83 ft·lbf)**

#### HINT:

At the time of installation, after stabilizing the suspension, torque the nut.

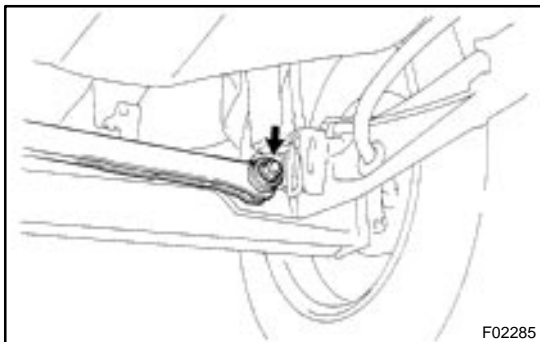

- (b) Remove the nut, 2 washers and lateral control rod from the axle beam.

**Torque: 83 N·m (850 kgf·cm, 61 ft·lbf)**

#### HINT:

At the time of installation, after stabilizing the suspension, torque the nut.