



DISASSEMBLY

REMOVE COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (b) Remove the nut.
- (c) Remove the washer.
- (d) Remove the suspension support.
- (e) Remove the coil spring.
- (f) Remove the spring bumper.