

REASSEMBLY

INSTALL COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021

NOTICE:


Do not use an impact wrench. It will damage the SST.

- (b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of shock absorber.

- (c) Install the spring bumper to the shock absorber piston rod.

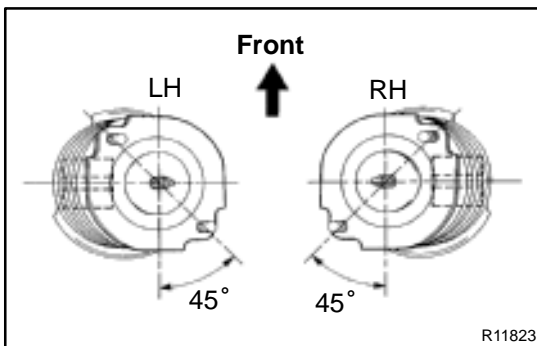

- (d) Align the suspension support with the shock absorber lower bracket, as shown in the illustration and install it.

- (e) Install the washer.

- (f) Install a new nut and torque it.

Torque: 34 N·m (350 kgf-cm, 25 ft-lbf)

- (g) Remove the SST.

SST 09727-30021